

DESIGN DEVELOPMENT INC.

100 R - 2W

100 R - 4

100 R - 5




100 R - 6

TRANSMISSION TEST SETS

MODELS 100R-2W, 100R-4, 100R-5, 100R-6

INSTRUCTION MANUAL

INSTALLATION DRAWINGS

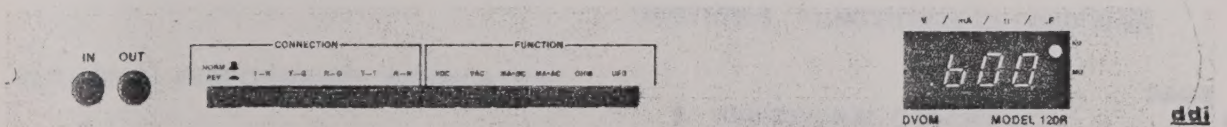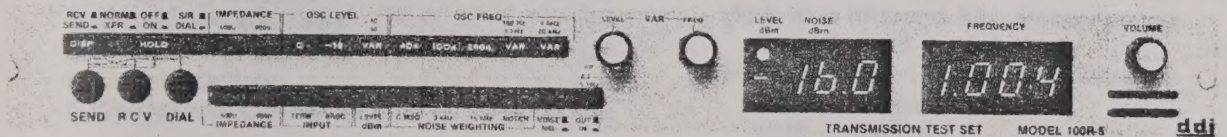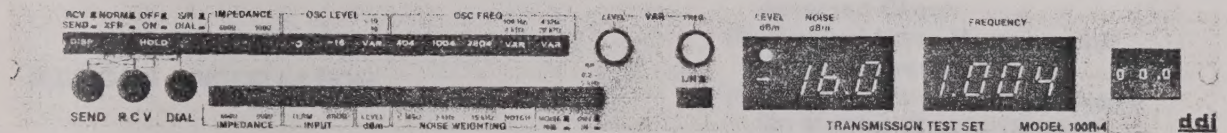

ddi

DESIGN DEVELOPMENT INC.
1440 Atteberry Lane, San Jose, CA 95131
Telephone: (408) 946-6770

CONTENTS

SECTION 1 GENERAL DESCRIPTION

CONTENTS	PAGE
1. GENERAL DESCRIPTION	1-1
A. Introduction	1-1
B. Transmission Measurements	1-1
C. Return Loss Measurements	1-2
D. Talk/Dial/Transfer/Hold	1-2
E. Specifications:	1-2
Models 100R-2W, 100R-5	1-3
Models 100R-4, 100R-6	1-4
Model 100A-3	1-5
Model 100A-2W	1-5

SECTION 2 INSTALLATION

CONTENTS	PAGE
2. INSTALLER'S INSTRUCTIONS	2-1
A. Introduction	2-1
B. Receiving Inspection	2-1
C. Equipment Mounting	2-1
D. Installer Connections	2-1
E. Built-In Options	2-1
F. Operational Checkout	2-2

SECTION 3 PERFORMANCE VERIFICATION

CONTENTS	PAGE
3. PROCEDURES	3-1
A. Introduction	3-1
B. Performance Verification	3-1
Procedures:	
Model 100R-2W	3-1
Model 100R-4	3-2
Model 100R-5	3-3
Model 100R-6	3-4

SECTION 4 OPERATION

CONTENTS	PAGE
4. OPERATING PROCEDURES	4-1
A. Introduction	4-1
B. Function of Controls and Indicators	4-1
C. Procedures:	4-4
(1) Sending a Fixed Test Tone Over an Accessed Circuit	4-4
(2) Sending a Variable Test Tone and Frequency Over an Accessed Circuit	4-5
(3) Receiving a Test Tone and Frequency Over an Accessed Circuit	4-6
(4) Noise Measurements Over an Accessed Circuit	4-7
(5) Notched Noise Measurements Over an Accessed Circuit	4-8
(6) Noise-to-Ground Measurements On Metallic Circuits (Models 100R-4, 100R-5)	4-9
(7) 4-Wire Transhybrid Balance (Return Loss) Measurements (Models 100R-4, 100R-6)	4-10
(8) 2-Wire ERL and SRL Measurements (Models 100R-4, 100R-6)	4-11
(9) Transmission Testing on 2-Wire Circuits (Models 100R-4, 100R-5, 100R-6)	4-12

SECTION 5 FUNCTIONAL DESCRIPTION

CONTENTS	PAGE
5. FUNCTIONAL DESCRIPTION	5-1
A. General	5-1
B. Transmitter Circuits for Oscillator and Return Loss	5-1
C. Return Loss Transmitter (Models 100R-4, 100R-6)	5-1
D. Receiver Analog Circuits	5-2
E. Digital Signal Processing Circuits	5-3
F. Switching and Control Logic Circuits	5-3

CONTENTS

SECTION 1: GENERAL INFORMATION

CHAPTER	PAGE
1. GENERAL INFORMATION	1-1
2. PROJECT DESCRIPTION	1-2
3. PROJECT LOCATION	1-3
4. PROJECT SCOPE	1-4
5. PROJECT OBJECTIVES	1-5
6. PROJECT CONSTRAINTS	1-6
7. PROJECT RISK	1-7
8. PROJECT STAKEHOLDERS	1-8
9. PROJECT COMMUNICATION	1-9
10. PROJECT REPORTING	1-10

SECTION 2: ANALYSIS

CHAPTER	PAGE
1. ANALYSIS INTRODUCTION	2-1
2. ANALYSIS OBJECTIVES	2-2
3. ANALYSIS SCOPE	2-3
4. ANALYSIS CONSTRAINTS	2-4
5. ANALYSIS RISK	2-5
6. ANALYSIS STAKEHOLDERS	2-6
7. ANALYSIS COMMUNICATION	2-7
8. ANALYSIS REPORTING	2-8

SECTION 3: PERFORMANCE VERIFICATION

CHAPTER	PAGE
1. PERFORMANCE VERIFICATION INTRODUCTION	3-1
2. PERFORMANCE VERIFICATION OBJECTIVES	3-2
3. PERFORMANCE VERIFICATION SCOPE	3-3
4. PERFORMANCE VERIFICATION CONSTRAINTS	3-4
5. PERFORMANCE VERIFICATION RISK	3-5
6. PERFORMANCE VERIFICATION STAKEHOLDERS	3-6
7. PERFORMANCE VERIFICATION COMMUNICATION	3-7
8. PERFORMANCE VERIFICATION REPORTING	3-8

SECTION 4: SPECIFIC PROJECT INFORMATION

CHAPTER	PAGE
1. PROJECT INTRODUCTION	4-1
2. PROJECT DESCRIPTION	4-2
3. PROJECT LOCATION	4-3
4. PROJECT SCOPE	4-4
5. PROJECT OBJECTIVES	4-5
6. PROJECT CONSTRAINTS	4-6
7. PROJECT RISK	4-7
8. PROJECT STAKEHOLDERS	4-8
9. PROJECT COMMUNICATION	4-9
10. PROJECT REPORTING	4-10

SECTION 6 CALIBRATION PROCEDURES

	CONTENTS	PAGE
6.	CALIBRATION PROCEDURES	6-1
A.	Introduction	6-1
B.	Test Equipment and Skill	
	Required	6-1
C.	Procedures:	6-2
	Level Calibration	6-2
	Noise Calibration	6-4

SECTION 7 INSTALLATION DRAWINGS

	CONTENTS	PAGE
7.	DRAWINGS	7-1
	Index	7-2
	Cable Apparatus, Overall System	7-3
	Cable Apparatus:	
	Model 100R-2W	7-4
	Model 100R-4	7-5
	Model 100R-5	7-6
	Model 100R-6	7-7
	Cabling, Model 100A-2W to Model	
	100R-5 or 100R-2W	7-8
	Cabling, Model 100A-3 to Model	
	100R-4, 100R-5, 100R-6	7-9
	Power Cabling	7-10
	Outline Drawings:	
	Model 100R-2W	7-11
	Model 100R-4	7-12
	Model 100R-5	7-13
	Model 100R-6	7-14
	Model 100A-2W	7-15
	Model 100A-3	7-16
	Model 100AB-1	7-17
	Model 100AB-3	7-18

SECTION 1: INTRODUCTION

1.1. Purpose and Scope	1.2
1.2. Objectives	1.3
1.3. Definitions	1.4
1.4. Abbreviations	1.5
1.5. References	1.6
1.6. Assumptions	1.7
1.7. Organization	1.8

SECTION 2: METHODOLOGY

2.1. Research Design	2.2
2.2. Data Collection	2.3
2.3. Data Analysis	2.4
2.4. Sampling	2.5
2.5. Instruments	2.6
2.6. Procedures	2.7
2.7. Ethical Considerations	2.8
2.8. Limitations	2.9
2.9. Conclusion	2.10
2.10. Acknowledgments	2.11
2.11. References	2.12
2.12. Appendix A	2.13
2.13. Appendix B	2.14
2.14. Appendix C	2.15
2.15. Appendix D	2.16
2.16. Appendix E	2.17
2.17. Appendix F	2.18
2.18. Appendix G	2.19
2.19. Appendix H	2.20
2.20. Appendix I	2.21
2.21. Appendix J	2.22
2.22. Appendix K	2.23
2.23. Appendix L	2.24
2.24. Appendix M	2.25
2.25. Appendix N	2.26
2.26. Appendix O	2.27
2.27. Appendix P	2.28
2.28. Appendix Q	2.29
2.29. Appendix R	2.30
2.30. Appendix S	2.31
2.31. Appendix T	2.32
2.32. Appendix U	2.33
2.33. Appendix V	2.34
2.34. Appendix W	2.35
2.35. Appendix X	2.36
2.36. Appendix Y	2.37
2.37. Appendix Z	2.38

WARRANTY

All products are warranted against defects in materials and workmanship for 3 years from the date of shipment. Our obligation covers repairing or replacing parts which prove to be defective during the warranty period and which shall be returned with transportation charges prepaid to Design Development Inc.. Obligation is limited to the original purchaser. Warranty repairs will be made at no cost to the customer, provided that the products have not been subjected to improper installation, misuse, accidental damage, or alteration without authorization. We are not liable for consequential damages.

CUSTOMER SERVICE

If assistance is needed regarding the operation or repair of an instrument contact the Design Development Inc. Customer Service Department as shown below.

Customer Service Dept.,

Telephone: (408) 946-6770



Digitized by the Internet Archive
in 2026

https://archive.org/details/manualsplus_13069

SECTION 1 GENERAL DESCRIPTION

CONTENTS	PAGE
1. GENERAL DESCRIPTION	1-1
A. Introduction	1-1
B. Transmission Measurements	1-1
C. Return Loss Measurements	1-2
D. Talk/Dial/Transfer/Hold	1-2
E. Specifications:	1-2
Models 100R-2W, 100R-5	1-3
Models 100R-4, 100R-6	1-4
Model 100A-3	1-5
Model 100A-2W	1-5

1.0 GENERAL DESCRIPTION

A. Introduction

1.01 The test sets described in this manual perform all of the common measurement functions required for telephone office maintenance. These instruments, available in various measurement configurations, are intended for use in test boards, carrier lineups, or miscellaneous equipment bay lineups. The equipment design employs advanced microprocessor technologies, and places prime emphasis on high reliability, simplicity of operation, and low power consumption.

1.02 The Design Development Inc. Models 100R-2W, 100R-4 and 100R-5 are Transmission Test Sets (TTS) with similar but not identical measurement capabilities. These are described in paragraph 1.03. The Model 100R-6, used for 2-wire and 4-wire return loss measurements, is described in paragraph 1.09. Since the Model 100R-4 can also perform return loss measurements in addition to transmission measurements, paragraph 1.09 also applies to it. The measurement features of all models are summarized in Table 1-1.

B. Transmission Measurements

1.03 Models 100R-2W, 100R-4 and 100R-5 provide accurate measurement of level, noise, and frequency. These test sets include the ability to send sinewave signals from a wideband audio oscillator that is independent of the measuring circuits.

1.04 The level receiver input circuits provide for terminated (600 or 900 ohms) or bridging measurements, pushbutton selectable. The receiver autoranging circuit enables level measurements without manual switching. A separate frequency readout provides a simultaneous display in kHz (with autoranging) of the level being measured.

1.05 Noise measurements are made using the same circuits and displays employed for level measurements. The frequency display is blanked for noise measurements. Pushbutton selection is provided for C message, 3 kHz flat, and 15 kHz flat noise filters, and also a 1010 Hz noise notch filter. In addition, Models 100R-4 and 100R-5 can measure noise-to-ground through a range of 135 to 40 dBm, and includes a pushbutton-selectable band pass filter (0.2 to 5 kHz) for interference protection.

1.06 The audio oscillator provides 3 pushbutton-selectable preset test frequencies (404, 1004, and 2804 Hz) and 2 preset levels (0, -16 dBm), on Models 100R-4 and 100R-5. The Model 100R-2W has 3 preset levels (0, -2, -16 dBm). Variable controls provide a range of 100 Hz to 20 kHz for frequency, and -40 to +10 dBm for level.

1.07 An optional aisle display, Model 100A-3, can be used with Models 100R-4 and 100R-6 to display level, noise, frequency, and return loss readings. The aisle display is readable up to 30 feet away. The Model 100R-2W and 100R-5 use the optional Model 100A-2W Aisle Display to display level, noise, and frequency readings for remote viewing up to 30 feet away. In addition, the Model 100R-2W and 100R-5 can be used with the Model 100C-2W combiner. This unit (optional) combines 8 TTS units (expandable) to up to 12 aisle display runs (expandable). This means that any TTS unit can switch to and work in any aisle and all TTS operators can be working separately of each other at all times, with no sharing or contention for a meter.

1.08 Each instrument is inspected both mechanically and electrically prior to shipment. All models operate from a -48 VDC power supply. Each unit occupies only 1-3/4 inches of rack space height (1 rack space) in a 19 or 23-inch wide rack.

TABLE 1-1. MODEL FEATURES

FEATURES	MODEL					
	100R-2W	100R-4	100R-5	100R-6	100A-3	100-A2W
Level meas.	*	*	*		*	*
Frequency meas.	*	*	*		*	*
Noise meas.	*	*	*		*	*
Noise-to-ground		*	*		*	
Talk/dial/hold		*	*	*	n/a	n/a
Oscillator	*	*	*		n/a	n/a
Return loss 2W/4W		* #		*	*	
Monitor speaker			*		n/a	n/a
External audio monitor	*	*	*	*	n/a	n/a
n/a = not applicable # = Return loss functions indicated by red lettering on front panel						

C. Return Loss Measurements

1.09 The return loss functions of Models 100R-4 and 100R-6 provide a direct readout of both 2-wire and 4-wire Echo Return Loss (ERL), Singing Return Loss Low (SRL LO), and Singing Return Loss High (SRL HI). For ERL measurements, a white-noise test signal between 560 and 1965 Hz is used. SRL is measured on two bands, 260 to 500 Hz for SRL LO, and 2200 to 3400 Hz for SRL HI. Individual impedance selection is provided for both 2-wire (600 or 900 ohms) and 4-wire (600 ohms) on the front panel.

1.10 Pushbutton switches control the selection of the noise spectrum filters. The front panel also provides thumbwheel switches for setting the Trans Hybrid Loss (THL) correction. This allows the craftsperson to obtain an actual true reading without additional calculation when measuring on a 4-wire circuit.

1.11 The return loss receiver is similar to that previously described for Level/Noise. A built-in bandpass protection filter prevents low and high frequencies out of the band of interest from

affecting the return loss reading. This filter is pushbutton-selected on the front panel.

D. Talk/Dial/Transfer/Hold

1.12 Models 100R-4 and 100R-5 provide for simultaneous transmit and receive operation. A tone can be transmitted on one circuit, while an incoming tone (or noise) is measured on another circuit. A dial jack allows the craftsperson to dial up and hold a circuit when making a level, noise, or return loss test, for example. When the test is complete in one direction, a pushbutton switch on the front panel is used to reverse the transmit/receive direction. The Talk/Dial/Hold feature is used on the Model 100R-6 to dial up an office balance termination number (Code 100).

E. Specifications.

1.13 Specifications for Models 100R-2W and 100R-5 are listed in Table 1-2. Specifications for Models 100R-4 and 100R-6 are provided in Table 1-3, and for the Model 100A-3 and 100A-2W Aisle Displays in Tables 1-4 and 1-5.

**TABLE 1-2
SPECIFICATIONS
FOR MODELS 100R-2W AND 100R-5**

LEVEL:

Input Range:	-50 to +10 dBm, autoranging (Model 100R-2W) -50 to +15 dBm, autoranging (Model 100R-5)
Resolution:	0.1 dB
Frequency Response:	±0.1 dB, 100 Hz to 20 kHz
Sampling Rate:	5 times per second
Detection Method:	full-wave averaging
Accuracy:	±0.1 dB
Blanking:	+ sign for overrange - sign for underrange (digits are blanked in both cases)
Damping:	similar to analog meters

FREQUENCY MEASUREMENTS:

Range:	Autoranging with two ranges: Below 100 Hz to 9.999 kHz, 9.00 kHz to 30 kHz
Display:	Four-digit .43" LED, displays for level measurements
Sampling Rate:	5 times per second
Accuracy:	1 count ± one part in 10 ⁵
Resolution:	1 Hz or 10 Hz, autoranging
NOISE:	
Input Range:	0 dBrn to 60 dBrn (Model 100R-2W) 0 dBrn to 95 dBrn (Model 100R-5)
Resolution:	1 dB
Noise Filters:	'C' message, 3 kHz, 15 kHz and 1010 noise notch (standard) 15 kHz is replaceable if desired
Detector:	Quasi RMS
Accuracy:	±1 dB from 95 dBrn to 20 dBrn; ±2 dB from 20 dBrn to 10 dBrn
Reading Update Rate:	2½ times per second
Blanking:	+ sign for overrange - sign for underrange digits are blanked in both cases
Frequency Display:	Automatically blanked for noise measurement.

NOISE TO GROUND (Model 100R-5 only)

Range (at 600 ohms and 900 ohms)	135 to 40 dBrn
Resolution:	1 dB
Accuracy:	±1.5 dB, 130 dBrn to 50 dBrn

OSCILLATOR:

Frequency Range:	Variable from 100 Hz to 20 kHz in two ranges: 100 Hz to 4 kHz, and 4 kHz to 20 kHz
Programmed Frequencies:	Up to 3 within the oscillator range. Standard frequencies supplied are 404, 1004, 2804 Hz.

Level Range:	From -40 to +10 dBm
Programmed Levels:	Up to 2 (Model 100R-5) or 3 (Model 100R-2W), and variable. Standard levels are 0, and -16 dBm (Model 100R-5 or 0, -2 and -16 dBm (Model 100R-2W)
Level Variation:	±0.1 dB, 200 Hz to 20 kHz
Harmonic Distortion:	1% total, 100 Hz to 20 kHz, Less than 0.5% at 1004 Hz
Output Impedance:	600 or 900 ohms balanced.

GENERAL (Model 100R-5 only):

Input and output impedance is 600 ohms with 30 dB minimum return loss using the ERL or SRL spectrums. Longitudinal balance exceeds 50 dB from 50 Hz to 60 kHz.

Talk/Dial/Transfer/Hold:

S/R Dial Jack:	Allows operator to dial up and hold 2-wire circuit.
Hold button:	Allows holding on SEND or RCV jack
Normal/Transfer button:	Allows operator to reverse the transmit/receive direction
DISP button:	Allows operator to monitor oscillator output or receive input signals
Selectable Input:	600 ohms or 900 ohms, terminated or bridging
Bridging Loss:	Less than 0.2 dB
Reading Response:	Similar to analog meters
Audio Monitor:	Level or noise, rear access wiring option.
Power ON/OFF:	Switch in rear panel
Access:	310 Jacks standard with 5/8" spacing. Tip-spring & Ring-spring contacts for both level and oscillator inputs/outputs on back.

GENERAL (Model 100R-2W only):

Selectable Input:	600 ohms or 900 ohms, terminated or bridging
Bridging Loss:	Less than 0.2 dB
Reading Response:	Similar to analog meters
Audio Monitor:	Level or noise, rear access wiring option.
Power ON/OFF:	Switch on rear panel.
Cal Send:	Rear access wiring option
Access:	310 jacks standard with 5/8" spacing. Tip-spring & Ring-spring contacts for both level and oscillator inputs/outputs on back panel.

INPUT POWER:

Power Supply:	-44 Vdc to -54 Vdc
Current Drain:	300 mA nominal at -48 Vdc

DIMENSIONS:

Mounting:	19" or 23" rack (reversible rack ears supplied standard).
------------------	---

TEMPERATURE RANGE

(Operating):	10° C to 40° C
---------------------	----------------

TABLE 1-3
SPECIFICATIONS
For Models 100R-4 and 100R-6

LEVEL (Model 100R-4 only):

Input Range: -50 dBm to +15 dBm (autoranging)
Resolution: 0.1 dB
Variation with frequency: ± 0.1 dB, 100 Hz to 20 kHz
Detector: Full wave average
Reading update rate: 5 times per second
Blanking: + sign for overrange
 - sign for underrange
 Digits are blanked in both cases

Damping: Similar to analog meters
Accuracy: ± 0.1 dB

FREQUENCY (Model 100R-4 only):

Range: Autoranging with two ranges:
 Below 100 Hz to 9.999 kHz;
 9.99 kHz to 30 kHz
Display: Four digit .43 in. LED, displays digits
 whenever level is read

Reading update rate: 5 times per second
Accuracy: 1 count plus one part in 10^5
Resolution: Autoranging, 1 Hz or 10 Hz

NOISE (Model 100R-4 only):

Input range: 0 dBrn to 95 dBrn
Resolution: 1 dB
Noise filters: 'C' message, 3 kHz, 15 kHz and 1010
 noise notch

Detector: Quasi RMS
Accuracy: ± 1 dB 95 to 20; ± 2 dB 20 to 10 dBrn
Reading update rate: $2\frac{1}{2}$ times per second
Blanking: + sign for overrange
 - sign for underrange
 digits are blanked in both cases

Frequency display: Automatically blanked for noise
 measurement

NOISE-TO-GROUND (For Models 100R-4 only):

Range
 (@600 ohms and 900 ohms) 135 to 40 dBrn
Resolution 1 dB
Accuracy ± 1.5 dB, 130 dBrn to 50 dBrn

LEVEL AND NOISE (Model 100R-4 only):

Selectable Input 600 ohms or 900 ohms, terminated
 or bridging
Bridging loss: Less than 0.2 dB
Reading response: Similar to analog meters
Audio monitor: Level or noise, rear access wiring
 option

OSCILLATOR (Models 100R-4 only):

Frequency range: Variable from 100 Hz to 20 kHz in two
 ranges; 100 Hz to 4 kHz, and 4 kHz to
 20 kHz

Programmed frequencies: Up to 3 within the oscillator range.
 Standard frequencies supplied are
 404, 1004, 2804 Hz

Level range: From -40 to +10 dBm
Programmed levels: Up to 2 and variable. Standard levels
 are 0 and -16 dBm.

Level variation: ± 0.1 dB, 200 Hz to 20 kHz
Harmonic distortion: 1% total, 100 Hz to 20 kHz. Less
 than 0.5% at 1004 Hz

RETURN LOSS:

TRANSMITTER:

Output level: Switch selectable -2 dBm
 ± 0.2 dB or -18 dBm ± 0.3 dB

TEST SIGNALS:

White noise, band limited by three filters as described below:

Echo return loss: 560-1965 Hz (-3 dB)

Singing return loss low: 260-500 Hz (-3 dB)

Singing return loss high: 2200-3400 Hz (-3 dB)

Variation in power level when switching filters: ± 0.1 dB max.

RECEIVER:

Return loss range: -15 dB (+15 ret. gain) to +50 dB

Resolution: 1 dB

Overall accuracy: ± 1 dB to 40 dB; ± 2 dB to 50 dB
 return loss

Reading update rate: $2\frac{1}{2}$ times per second

Trans-hybrid loss

correction range: 0 to 29.9 dB in 0.1 dB steps

Interference protection
filter:

Bandpass 200-5000 Hz. Rejects
 below 60 Hz and above 56 kHz > 40
 dB. The filter is included as a
 standard feature (pushbutton
 selectable)

2-WIRE:

Accuracy: ± 1 dB

Compromise network

accuracy: 600/900 $\pm 0.1\%$, $+2.16\mu F \pm 1\%$. Dial
 and Hold circuits provided
 (pushbutton selectable)

GENERAL

Input and output impedance is 600 ohms with 30 dB minimum
 return loss using the ERL or SRL spectrums. Longitudinal
 balance exceeds 50 dB from 50 Hz to 60 kHz.

Talk/Dial/Transfer/Hold:

S/R Dial Jack: Allows operator to dial up and hold
 2-wire circuit

Hold button: Allows holding on SEND or RCV jack

NORM/Transfer button: Allows operator to reverse the
 transmit/receive direction

Audio Monitor: Level or noise, rear access wiring
 option.

Power ON/OFF: Switch on rear panel

Access: 310 jacks standard with 5/8" spacing.
 Tip-spring & Ring-spring contacts
 for both level and oscillator inputs/
 outputs on back panel.

INPUT POWER:

Power supply: -44 Vdc to -54 Vdc

Current Drain: 300 mA nominal at -48 Vdc

DIMENSIONS: 17" W x 9 $\frac{1}{4}$ " D x 1 $\frac{3}{4}$ " H

Mounting: 19" or 23" rack (reversible rack
 ears supplied standard)

TEMPERATURE RANGE

(Operating): 10° C to 40° C

**TABLE 1-4
SPECIFICATIONS FOR
MODEL 100A-3 AISLE DISPLAY**

Power:	-48 Vdc external source fused at 1 amp
Current Drain:	175 mA nominal at -48 Vdc
Displays:	1" high LED displays
Cable Requirements:	1 pair (2 wires) unshielded 22 ga. maximum distance 100A-3 to TMS or any combination multiple run is 10,000 feet
Number of Units:	Up to 50 per installation (system)
Dimensions:	Overall, 11.5" W x 9.5" H x 2" D
Position Served Indicator:	0.43" high LED
NOTE: Model 100A-3 is for use with Models 100R4 or 100R6 Test Sets for remote viewing up to 30 feet away.	
Temperature Range (Operating):	10° C to 40° C

**TABLE 1-5
SPECIFICATIONS FOR
MODEL 100A-2W AISLE DISPLAY**

Power:	-48 Vdc external source fused at 1 amp
Current Drain:	175 mA nominal at -48 Vdc
Displays:	1" L.E.D. displays
Cable Requirements:	1 pair (2 wires) unshielded 22 ga maximum distance 100A-2W to combiner or any combination multiple run is 10,000 feet
Number of Units:	Up to 100 per installation (system)
Dimensions:	Overall, 11.5" W x 9.5" H x 2" D
Position Served Indicator:	0.43" LED

SECTION 2 INSTALLATION

CONTENTS	PAGE
2. INSTALLER'S INSTRUCTIONS	2-1
A. Introduction	2-1
B. Receiving Inspection	2-1
C. Equipment Mounting	2-1
D. Installer Connections	2-1
E. Built-In Options	2-1
F. Operational Checkout	2-2

2.0 INSTALLER'S INSTRUCTIONS

A. Introduction

2.01 This section contains the instructions for installation and interconnection of the Model 100R Series and optional aisle display units. The instructions include:

- (a) Receiving inspection.
- (b) Equipment mounting.
- (c) Installer connections.
- (d) Built-in options.
- (e) Operational checks.

B. Receiving Inspection

2.02 Remove the instrument from the shipping carton and carefully inspect it for physical damage that may have occurred during transit. If the unit is damaged, file a claim with the transfer company. The original packaging should be retained to facilitate any damage claim.

C. Equipment Mounting.

2.03 Refer to the outline drawings on pages 7-11 through 7-16 of this manual. The Model 100R Series mounts into one rack space (1-3/4-inch vertical height). All units are supplied with reversible rack mounting ears for either 19- or 23-inch mounting. Each unit requires a rack depth of 9 inches.

2.04 The aisle display units (optional) may be positioned for overhead viewing by mounting it using a 5/8-inch threaded rod (see page 7-16). The display unit top hanger assembly can also be used for wall mounting, or from either side for bay mounting.

D. Installer Connections

2.05 Before proceeding with the installation, refer to pages 2-2 and 2-3 of this manual to determine the equipment location, cable runs required, and which wiring options are to be installed.

2.06 Input power connections are made at the rear panel terminal screw block. The wire size and terminal connections are shown on the CAD drawings on pages 7-3 through 7-7 of this manual. It is recommended that the -48 Vdc source to each unit be fused at 1 amp. Refer to the power cabling diagram of the -48 Vdc office fuse panel on page 7-10.

E. Built-In Options

2.07 Paragraphs 2.08 through 2.11 describe the built-in options that may be wired in during installation as specified by the job engineer.

2.08 Test Board and Misc. Jack Multiples: As an option, the tip-spring and the ring-spring of both the oscillator output and the level/noise input can be accessed through rear panel connector TS1 on Models 100R-2W, 100R-4, and 100R-5. This is useful, for example, for operation of a test board with a TMS or oscillator key connection. See pages 7-4 through 7-6 for pin location.

2.09 Audio Monitor, Models 100R2W, R4, R5, R6: An audio monitor of the level or noise signal being measured is present at TS1 connector (see pages 7-4 through 7-7 for the appropriate pin location).

2.10 Dial Jack, Models 100R4, R5, R6: These models have a 2-wire dial jack that allows the operator to dial up and hold a circuit when making a level, noise, or return loss test. The tip-spring and ring-spring also appear on the back at TS1 (see pages 7-5 through 7-7 for pin locations).

2.11 Remote Display: Connector TS1 at the rear of the Model 100R series provides the output signals for operation of optional Models 100A-2W or Model 100A-3 depending on the application. Connections are made through standard wirewrap pins, except for the Model 100A-2W &

100A-3, which both have screw terminals. Both mount using a standard 5/8-inch threaded rod or rack mounting using the bracket on the right or left side mounting arrangement. See pages 7-8 and 7-9 for cross-connect wiring.

F. Operational Checkout

2.12 After the installation has been completed, make an operational check of the equipment using the performance verification procedures in Section 3 following.

INSTALLER PLEASE READ BEFORE PROCEEDING

1. All wiring detail is show in Section 7, the Installation Drawing package.
2. A separate job installation document should be provided for you by the Job Engineer/Customer showing equipment relay rack location, fusing, cable runs, wiring options, etc. in order to proceed with the installation.
3. Tables 2-1 and 2-2 list the customer wiring options which are available at time of installation.

Table 2-1 Model 100R-2W Only

WIRING OPTION	DESCRIPTION OF OPTION	REFERENCE LOCATION	PROVIDE	
			YES	NO
N,P (RCV) (AUX) R,S (SEND) (AUX)	Misc. jack multiple	Section 7 Page 7-4 Sheet 3		
H,J (monitor)	Audio monitor to high impedance speaker amp	Section 7 Page 7-4 Sheet 3		
(X) Pin E,F	DC loop holding for oscillator	Section 7 Page 7-4 Sheet 3		
(Y) A - C B - D	Cal Pushbutton key (pro- vided strapped from factory)	Section 7 Page 7-4 Sheet 3	X	
TABLE 1 STRAPPING OPTION	POSITION SERVED INDICATION provided when used with 100C-2W Combiner	Section 7 Page 7-4 Sheet 3		

Table 2-2 Models 100R-4, 100R-5, 100R-6

WIRING OPTION	DESCRIPTION OF OPTION	REFERENCE LOCATION		PROVIDE	
				YES	NO
K,L (RCV) (AUX) N,P (SEND) (AUX) F,H (Dial)	Misc jack multiple	Section 7 Pages 7-5, 7-6, 7-7 Sheets 4, 5, 6			
R,S (monitor)	Audio monitor to high impedance speaker amp	Section 7 Pages 7-5, 7-6, 7-7 Sheets 4, 5, 6			
TABLE 1	POSITION SERVED INDICATION provided when used with 100C-2W Combiner	Section 7 Pages 7-4 thru 7-7 Sheets 3 thru 6			
C,D (NET)	N1, N2 connections for Precision External Network	100R-4, R6 only; Section 7 Pages 7-5, 7-7 Sheets 4 & 6			
A, B EXT OSC INPUT		Section 7 Page 7-7 R6 only Sheet 4			

SECTION 3 PERFORMANCE VERIFICATION

	CONTENTS	PAGE
3. PROCEDURES		3-1
A. Introduction		3-1
B. Performance Verification		3-1
Procedures:		
Model 100R-2W		3-1
Model 100R-4		3-2
Model 100R-5		3-3
Model 100R-6		3-4

3.0 PROCEDURES

A. Introduction

3.01 The procedures in this section enable the craftsman to check that the equipment is operating properly. These checks should be performed after installation is complete, and may also be used for periodic checkout if required by office procedures.

3.02 There are six 10-turn potentiometers on the rear panel of the instrument. These controls adjust the oscillator fixed levels of 0, -2, (Model 100R-2W), and -16 dBm, and fixed frequencies of .404, 1.004, and 2.804 kHz.

B. Performance Verification Procedures

3.03 The procedures are organized as follows:
 (a) Model 100R-2W, Procedure 3-1.
 (b) Model 100R-4, Procedure 3-2.
 (c) Model 100R-5, Procedure 3-3.
 (d) Model 100R-6, Procedure 3-4.

CAUTION:

Do not begin the procedure until the equipment has warmed up for a period of 2 to 3 hours. This is necessary to ensure optimum stability of readings.

PROCEDURE 3-1. MODEL 100R-2W PERFORMANCE VERIFICATION

STEP	PROCEDURE
1	Patch from the SEND jack to the RCV jack using a standard telephone patchcord.
2	Set the 600/900 toggle switch to 600 .
3	Press the bottom IMPEDANCE 600 pushbutton. Press the INPUT TERM and dBm LEVEL push-buttons. Press the OSC LEVEL 0 and OSC FREQ 1004 pushbuttons.
4	Check that the level display reads 0.0 dBm and the frequency display 1.004 kHz. If not, on the rear panel adjust the LEVEL 3 control for a 0.0 dBm reading. If necessary, adjust the FREQ 2 control to obtain a reading of 1.004 kHz.
5	Press the OSC FREQ 404 pushbutton. Check that the frequency display reads .404 kHz. If not, adjust the FREQ 3 control.
6	Press the OSC FREQ 2804 pushbutton. Check that the frequency display reads 2.804 kHz. If not, adjust the FREQ 1 control.
7	Press the OSC LEVEL -2 pushbutton. Check that the level display reads -2.0 dBm. If not, adjust the LEVEL 2 control.
8	Press the OSC LEVEL -16 pushbutton. Check that the reading is -16.0 dBm. If not, adjust the LEVEL 1 control.
9	Remove the patchcord from the SEND and RVC jacks. This completes the operational check of the unit.

PROCEDURE 3-2.
MODEL 100R-4 PERFORMANCE VERIFICATION

CAUTION:

Do not begin the procedure until the equipment has warmed up for a period of 2 to 3 hours. This is necessary to ensure optimum stability of readings.

STEP	PROCEDURE
1	Patch from the SEND jack to the RCV jack using a standard telephone patchcord.
2	Select the front panel pushbutton as follows: RCV SEND DISP to RCV.  NORM XFR to NORM  OFF ON HOLD to OFF  S/R DIAL to S/R  Oscillator IMPEDANCE 600 OSC LEVEL 0 OSC FREQ ~~404~~ <i>1004</i> Level IMPEDANCE 600 INPUT TERM dBm LEVEL 4WTLP to O/O  2W NET to INT  BP 0.2-5 kHz to OUT  L/N RL to L/N  THL CORRECT 4W thumbwheels to 00.0
3	Check that the level and frequency displays read 0.0 dBm and 1.004 kHz, respectively. If necessary, adjust the LEVEL 2 and FREQ 2 controls for the correct readings.
4	Press the OSC FREQ 404 pushbutton. Check that the display reads .404 kHz. If necessary, adjust the FREQ 3 control.
5	Press the 2804 pushbutton. Check for a reading of 2804. If not, adjust using the FREQ 1 control.
6	Press the OSC LEVEL -16 pushbutton. Check for a -16.0 dBm reading. If not, use the LEVEL 1 control for adjustment.
7	Remove the patchcord (step 1), then press the L/N RL pushbutton so that RL is selected. Press the CIRCUIT TYPE 2W 600 pushbutton. Check that the return loss display reads 0 dB. If not, adjust using the LEVEL 3 control until + and - signs are alternating.
8	Patch from the SEND to the RCV jack using a standard telephone cord.
9	Press the CIRCUIT TYPE 4W 600 pushbutton. Check that the THL CORRECT 4W thumbwheels are set to 00.0. Check that 4WTLP pushbutton is in O/O position. Check that the return loss display reads 0 dB. If this can not be obtained, check to make sure that the patchcord being used does not have a higher than normal resistance, or has a dirty plug.
10	Press the 4WTLP pushbutton so that it is in the -16/+7 position. Check that the display reads +23 dB. Set the THL CORRECT 4W thumbwheels to 23.0. Check that the display reads 0.
11	Remove the patchcord from the SEND and RCV jacks. This completes the operational checkout of the Model 100R-4.

PROCEDURE 3-3.
MODEL 100R-5 PERFORMANCE VERIFICATION

CAUTION:

Do not begin the procedure until the equipment has warmed up for a period of 2 to 3 hours. This is necessary to ensure optimum stability of readings.

STEP	PROCEDURE
1	Patch from the SEND jack to the RCV jack using a standard telephone patchcord.
2	Select the front panel pushbuttons as follows: RCV SEND DISP to RCV.  NORM XFR to NORM  OFF ON HOLD to OFF  S/R DIAL to S/R  Oscillator IMPEDANCE 600 OSC LEVEL 0 OSC FREQ 1004 Level IMPEDANCE 600 INPUT TERM dBm LEVEL BP 0.2-5 kHz to OUT 
3	Check that the level and frequency displays read 0.0 dBm and 1.004 kHz, respectively. If necessary, adjust the LEVEL 2 and FREQ 2 controls for the correct readings.
4	Press the OSC FREQ 404 pushbutton. Check that the display reads .404 kHz. If necessary, adjust the FREQ 3 control.
5	Press the 2804 pushbutton. Check for a reading of 2804. If not, adjust using the FREQ 1 control.
6	Press the OSC LEVEL -16 pushbutton. Check for a -16.0 dBm reading. If not, use the LEVEL 1 control for adjustment.
	Remove the patchcord from the SEND and RCV jacks. This completes the operational checkout of the Model 100R-5.

PROCEDURE 3-4.
MODEL 100R-6 PERFORMANCE VERIFICATION

CAUTION:

Do not begin the procedure until the equipment has warmed up for a period of 2 to 3 hours. This is necessary to ensure optimum stability of readings.

STEP	PROCEDURE
1	Select the front panel pushbuttons as follows: NORM XFR to NORM  OFF ON HOLD to OFF  S/R DIAL to S/R  CIRCUIT TYPE to 2W 600 TEST to ERL 4WTLP to 0/0  2W NET to INT  BP 0.2-5 kHz to OUT  THL CORRECT thumbwheels to 0.0
2	Check that the return loss display reads 0 dB. If not, adjust using the LEVEL 3 control on the rear panel until the + and - signs are alternating.
3	Patch from the SEND jack to the RCV jack using a standard telephone patchcord.
4	Press the CIRCUIT TYPE 4W 600 pushbutton. Check that the THL CORRECT 4W thumbwheels are set to 00.0. Check that the 4WTLP pushbutton is in the 0/0 position. Check that the display reads 0 dB. If this cannot be obtained, make sure that the patchcord being used does not have a higher than normal resistance, or has a dirty plug.
5	Press the 4WTLP pushbutton so that it is in the -16/+7 position. Check that the display reads +23 dB. Adjust the THL CORRECT 4W thumbwheels to 23.0. Check that the display reads 0.
6	Remove the patchcord from the SEND and RCV jacks. This completes the operational checkout of the Model 100R-6.

SECTION 4 OPERATION

CONTENTS	PAGE
4. OPERATING PROCEDURES	4-1
A. Introduction	4-1
B. Function of Controls and Indicators	4-1
C. Procedures:	4-4
(1) Sending a Fixed Test Tone Over an Accessed Circuit	4-4
(2) Sending a Variable Test Tone and Frequency Over an Accessed Circuit	4-5
(3) Receiving a Test Tone and Frequency Over an Accessed Circuit	4-6
(4) Noise Measurements Over an Accessed Circuit	4-7
(5) Notched Noise Measurements Over an Accessed Circuit	4-8
(6) Noise-to-Ground Measurements On Metallic Circuits (Models 100R-4, 100R-5)	4-9
(7) 4-Wire Transhybrid Balance (Return Loss) Measurements (Models 100R-4, 100R-6)	4-10
(8) 2-Wire ERL and SRL Measurements (Models 100R-4, 100R-6)	4-11

(9) Transmission Testing on 2-Wire Circuits (Models 100R-4, 100R-5, 100R-6)	4-12
---	------

4.0 OPERATING PROCEDURES

A. Introduction

4.01 This section contains information on the proper use of the test set to obtain accurate measurements. Separate procedures including diagrams are provided for each measurement type.

B. Function of Controls and Indicators

4.02 Table 4-1 lists the function of the controls and indicators for the Model 100R-4. This table also applies to Models 100R-2W and 100R-5 for the level, noise, frequency and send oscillator functions, except where noted otherwise. Table 4-1 also applies to the Model 100R-6 to describe the return loss function. The controls and indicators are listed in numerical order as identified in Figure 4-1 following.

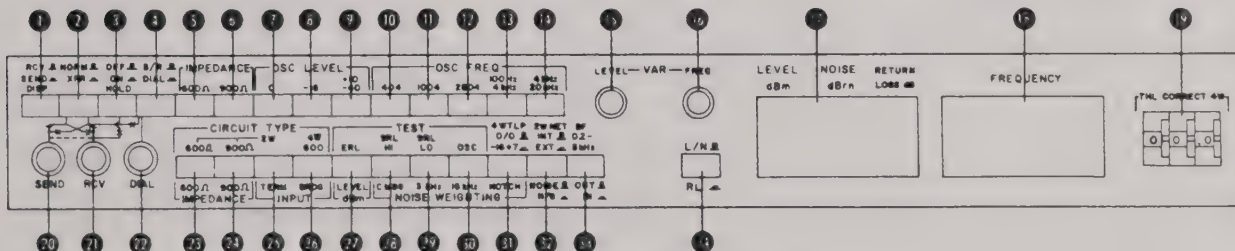


Figure 4-1. CONTROL AND INDICATORS


TABLE 4-1. FUNCTION OF CONTROLS AND INDICATORS

NO.	FUNCTION	NOTES
1	In the RCV position, connects the receive circuits to monitor and display level/frequency or noise signal on front panel display. In SEND position, connects receive circuits to monitor and display oscillator output.	Not 100R-2W
2	In NORM position, provides normal connection to SEND and RVC jacks. In XFR position, reverses internal connections to SEND and RCV jacks.	"

3	In OFF position, removes internal hold circuits from SEND and RCV jacks. In ON position, provides circuit holding for a 2-wire facility, on both jacks.	Not 100R-2W
4	In S/R position, provides normal send/receive operation. In DIAL position, allows talk/dial operation when test board position circuit or dial set is plugged into DIAL jack.	"
5	Selects 600 ohm oscillator output impedance.	Toggle switch on 100R-2W
6	Selects 900 ohm oscillator output impedance.	"
7	Selects 0 dBm oscillator output level	100R-2W also has -2 dBm level select.
8	Selects -16 dBm oscillator output level	
9	Selects continuously variable oscillator output level, as set by VAR LEVEL control.	
10	Selects .404 kHz oscillator output frequency.	
11	Selects 1.004 kHz oscillator output frequency.	
12	Selects 2.804 kHz oscillator output frequency.	
13	Selects continuously variable oscillator output frequency between 100 Hz and 4 kHz as set by VAR FREQ control.	Toggle switch on 100R-2W
14	Selects continuously variable oscillator output frequency between 4 kHz and 20 kHz, as set by VAR FREQ control.	"
15	Sets oscillator output level when OSC LEVEL VAR selected.	
16	Sets oscillator output level when OSC FREQ VAR selected.	
17	Digital display for level, noise, or return loss. LED indicates mode displayed.	
18	Digital display for frequency in kHz.	
19	Thumbwheel switches to set transhybrid loss from 00.0 to 29.9 dB for 4-wire return loss measurements.	Not 100R-2W or 100R-5
20	Type 310 jack for send oscillator output or return loss transmit.	No return loss 100R-2W, 100R-5
21	Type 310 jack for level/frequency or noise input, or return loss receive.	"
22	Type 310 jack to patch into test board position circuit or dial set.	Not 100R-2W


23	Selects 600 ohm impedance for level/noise or 600 ohm, 2-wire return loss depending on position of L/N RL pushbutton.	No return loss 100R-2W, 100R-5
24	As above for number 23, except for 900 ohm selection.	"
25	Selects terminated (600 or 900 ohms) input for level/noise with L/N RL pushbutton in L/N position.	"
	Selects 2-wire return loss measurement with L/N RL pushbutton in RL position.	"
26	Selects bridging connection for level/noise measurements with L/N RL pushbutton in L/N position.	"
	Selects 4-wire return loss measurement with L/N RL pushbutton in RL position.	"
27	Selects level and frequency display of input at RCV jack, with L/N RL pushbutton in L/N position.	
	Selects echo return loss band for return loss measurement with L/N RL pushbutton is in RL position.	No return loss 100R-2W, 100R-5
28	Selects noise measurements with C message weighting when L/N RL pushbutton in L/N position.	
	Selects singing return loss high band when L/N RL pushbutton is in RL position.	"
29	Selects noise measurements with 3 kHz flat weighting when L/N RL pushbutton is in L/N position.	
	Selects singing return loss low band when L/N RL pushbutton is in RL position.	"
30	Selects noise measurements with 15 kHz flat weighting when L/N RL pushbutton is in L/N position.	
	Selects external oscillator (if connected at rear panel) for structural return loss measurements, with L/N RL pushbutton at RL.	"
31	Selects 1010 Hz notch filter for noise measurements when L/N RL pushbutton is in L/N position.	
	Selects either 0/0 or -16/+7 test level point for 4-wire return loss measurements when L/N RL pushbutton in RL position, and CIRCUIT TYPE 4W 600 is pressed.	"
32	Selects either noise (out position) or noise to ground (in position), measurements when L/N RL pushbutton is in L/N position. Selects either internal compromise network (600 or 900 ohms + 2.16 uF) (out position), or external network if connected at rear panel (in position) for 2-wire return loss measurements with L/N RL pushbutton in RL position.	"
33	Selects 0.2 to 5 kHz bandpass filter for level/noise or return loss measurements.	
34	Selects level/noise or return loss function for switches 23 through 33 described above.	Model 100R-4 only

PROCEDURE 4-1. **SENDING A FIXED TEST TONE AND FREQUENCY OVER AN ACCESSED CIRCUIT.**

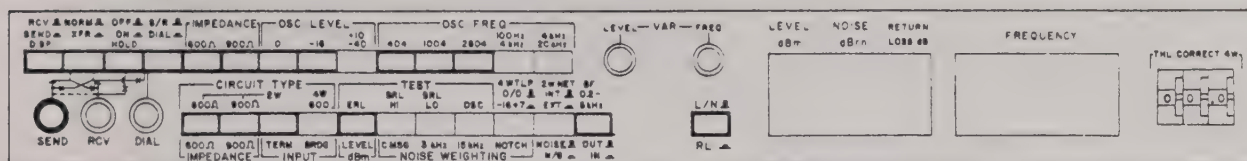

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to send a test tone over an accessed circuit.
2	On Models 100R-4 and 100R-5 only, set the front end pushbuttons as follows: RCV/SEND/DISP to SEND  NORM/XFR to NORM  OFF/ON/HOLD to OFF  S/R DIAL to S/R  BP 0.2-5 kHz to OUT  L/N RL to L/N  (Model 100R-4 only)
3	On Models 100R-4, 100R-5 and 100R-2W, set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms as desired INPUT TERM  dBm LEVEL
4	On Models 100R-4 and 100R-5 only, press the oscillator IMPEDANCE 600 or 900 ohm pushbutton as required.
	NOTE On the Model 100R-2W, this is a toggle switch selection setting.
5	Press the desired OSC LEVEL pushbutton, 0 , -2 (Model 100R-2W only), or -16 .
6	Press the desired OSC FREQ pushbutton, 404 , 1004 , or 2804 .
7	Access the circuit and connect either through the SEND jack on the TTS front panel, or through optional hardwired connections going to the rear of the unit.
8	A tone is now being sent out of the SEND jack over the accessed circuit. For Models 100R-4 and 100R-5 the tone level and frequency are displayed on the front panel.
	NOTE For the Model 100R-2W only, press and hold the CAL pushbutton to observe the tone level and frequency reading. Release the pushbutton to send tone over the accessed circuit.

PROCEDURE 4-2. **SENDING A VARIABLE TEST TONE AND FREQUENCY OF AN ACCESSED CIRCUIT.**

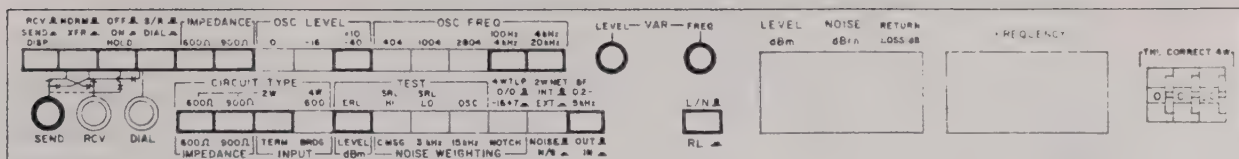

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to send a variable level test tone and frequency over an accessed circuit.
2	On Models 100R-4 and 100R-5, set the front end pushbuttons as follows: RCV/SEND/DISP to SEND NORM/XFR to NORM OFF/ON/HOLD to OFF S/R DIAL to S/R BP 0.2-5 kHz to OUT L/N RL to L/N (Model 100R-4 only).
3	On Models 100R-4, 100R-5 and 100R-2W, set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms as required INPUT TERM dBm LEVEL
4	On Models 100R-4 and 100R-5 only, press the oscillator IMPEDANCE 600 or 900 ohm pushbutton as required. On Model 100R-2W, this is a toggle switch selection setting.
5	Press the OSC LEVEL VAR pushbutton.
6	Note the reading on the front panel level display. Using the VAR LEVEL control, adjust for the desired test tone level.
	NOTE On the Model 100R-2W, press and hold the CAL pushbutton to observe the tone level. Release the pushbutton to send tone over the accessed circuit.
7	Press one of the OSC FREQ VAR pushbuttons for either a 100 Hz to 4 kHz range or a 4 kHz to 20 kHz range, as required. This is a toggle switch selection for Model 100R-2W.
8	Note the reading on the frequency display. Using the VAR FREQ control, adjust for the desired test tone frequency.
	NOTE On the Model 100R-2W, press and hold the CAL pushbutton to observe the tone frequency. Release the pushbutton to send tone over the accessed circuit.
9	Access the circuit and connect either through the SEND jack on the TTS front panel, or through optional hardwired connections going to the rear of the unit. A tone at the selected level and frequency is now being sent out of the SEND jack over the accessed circuit.


PROCEDURE 4-3.
RECEIVING A TEST TONE AND FREQUENCY OVER AN ACCESSED CIRCUIT.

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to receive a test tone and frequency over an accessed circuit.
2	On the Models 100R-4 and 100R-5 only, set the front end pushbuttons as follows: RCV/SEND/DISP to RCV NORM/XFR to NORM OFF/ON/HOLD to OFF S/R DIAL to S/R BP 0.2-5kHz to OUT L/N RL to L/N (Model 100R-4 only)
3	On Models 100R-4, 100R-5, and 100R-2W, set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms, as desired INPUT TERM dBm LEVEL
4	Access the circuit and connect through the RCV jack on the TTS front panel, or through optional hardwired connections going to the rear of the unit. NOTE If the circuit needs to be accessed using the front panel switching arrangement to provide dialing and holding, refer to procedure 4-9 on page 4-12.
5	The test tone level and frequency should be observed on the front panel displays.

PROCEDURE 4-4. **NOISE MEASUREMENTS OVER AN ACCESSED CIRCUIT.**

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to measure noise over an accessed circuit.
2	On Models 100R-4 and 100R-5 only, set the front end pushbuttons as follows: RCV/SEND/DISP to RCV NORM/XFR to NORM OFF/ON/HOLD to OFF S/R DIAL to S/R BP 0.2-5 kHz to OUT L/N RL to L/N (Model 100R-4 only)
3	On Models 100R-4, 100R-5, and 100R-2W, set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms, as desired INPUT TERM
4	Set the NOISE N/G pushbutton to the NOISE position.
5	Select the desired NOISE WEIGHTING pushbutton (either C MSG , 3 kHz , or 15 kHz).
6	Access the circuit and connect through the RCV jack on the TTS front panel, or through optional hardwired connections made at the rear panel.
NOTE If the circuit needs to be accessed using the front panel switching arrangement to provide dialing and holding, refer to procedure 4-9 on page 4-12.	
7	The noise reading in dBrn of the accessed circuit should now be displayed on the front panel readout.

PROCEDURE 4-5. **NOTCHED NOISE MEASUREMENTS OVER AN ACCESSED CIRCUIT.**

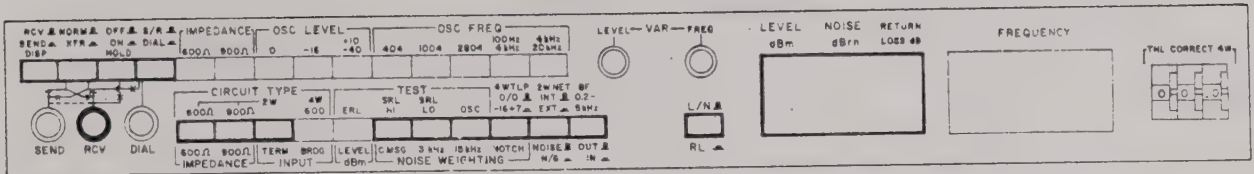

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to measure notched noise over an accessed circuit. A holding tone applied at the far end is notched out at the near end to achieve a dynamic noise measurement.
2	On Models 100R-4 and 100R-5 only, set the front end pushbuttons as follows: RCV/SEND/DISP to RCV  NORM/XFR to NORM  OFF/ON/HOLD to OFF  S/R DIAL to S/R  BP 0.2-5 kHz to OUT  L/N RL to L/N  (Model 100R-4 only)
3	On Models 100R-4, 100R-5, and 100R-2W, set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms, as desired INPUT TERM
4	Set the NOISE N/G to the NOISE  position.
5	Press the NOISE WEIGHTING NOTCH pushbutton. ( position).
6	Select the desired NOISE WEIGHTING pushbutton (either C MSG , 3 kHz , or 15 kHz).
7	Access the circuit and connect through the RCV jack on the TTS front panel, or through optional hardwired connections made at the rear panel.
	NOTE If the circuit needs to be accessed using the front panel switching arrangement to provide dialing and holding, refer to procedure 4-9 on page 4-12.
8	The notched noise reading in dBrn of the accessed circuit should now be displayed on the front panel readout.

PROCEDURE 4-6.
NOISE-TO-GROUND MEASUREMENTS ON METALLIC CIRCUITS
(MODELS 100R-4, 100R-5 ONLY).

The image shows the front panel of a Test Tone Set (TTS) with various controls and displays. Key sections include:

- RCV & NORM OFF & S/R**: A row of pushbuttons for receiver and normal operation settings.
- IMPEDANCE**: A selector switch with positions for 600Ω and 900Ω.
- OSC LEVEL**: A control knob with a scale from 0 to -40 dBm.
- OSC FREQ**: A control knob with a scale from 404 to 2804 kHz.
- LEVEL VAR FREQ**: A control knob for level and frequency variation.
- LEVEL NOISE RETURN**: A control knob with a scale from 0 to 100 dB.
- FREQUENCY**: A large digital display for frequency measurement.
- TEST**: A row of pushbuttons for different test functions.
- AWTLP**: A control knob for audio wideband test level.
- SWT BY**: A control knob for switch by.
- SEND RCV DIAL**: A row of pushbuttons for sending, receiving, and dialing.
- IMPEDANCE**: A selector switch with positions for 600Ω and 900Ω.
- INPUT**: A selector switch with positions for 600Ω and 900Ω.
- TERM**: A selector switch with positions for 600Ω and 900Ω.
- NOISE N/G**: A selector switch with positions for N/G and L/N.
- NOISE WEIGHTING**: A selector switch with positions for C MSG, 3 kHz, and 15 kHz.
- NOTCH**: A selector switch with positions for in and out.
- NOISE OUT**: A selector switch with positions for N/G and L/N.
- RL**: A selector switch with positions for L/N and RL.
- THL CORRECT 4W**: A small diagram showing a circuit for thermal noise correction.

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to measure noise to ground over an accessed metallic circuit. NOTE It is necessary to check first that the fuse panel or office ground is provided on pin 8 of rear panel connector TS-1. Refer to Note 2 on the CAD drawings on pages 7-5 through 7-7. This provides the ground reference necessary for the noise-to-ground measuring circuits.
2	Set the front end pushbuttons as follows: RCV/SEND/DISP to RCV  NORM/XFR to NORM  OFF/ON/HOLD to OFF  S/R DIAL to S/R  BP 0.2-5 kHz to OUT  L/N RL to L/N  (Model 100R-4 only)
3	Set the pushbuttons for the receive side as follows: IMPEDANCE (receive circuits) to 600 or 900 ohms, as desired INPUT TERM
4	Set the NOISE N/G pushbutton to the N/G  position.
5	Set the NOISE WEIGHTING NOTCH pushbutton to the in or out position as required for the test being made.
6	Select the desired NOISE WEIGHTING pushbutton (either C MSG, 3 kHz, or 15 kHz).
7	Access the TTS through the RCV jack on the front panel, or through optional hardwired connections made at the rear panel. Connect the T and R wires together, then connect them to the circuit under test.
8	The noise-to-ground reading in dBm of the accessed circuit should now be shown on the front panel display.

PROCEDURE 4-7.
4—WIRE TRANSYBRID BALANCE (RETURN LOSS) MEASUREMENTS,
MODELS 100R-4, 100R-6 ONLY.

The image shows the front panel of a TTS instrument. It includes several sections:


- RCV & NORM**: A switch with positions for RCV, NORM, OFF, and XFR.
- SEND, RCV, DIAL**: Three large circular jacks.
- IMPEDANCE**: A switch with positions for 600Ω, 300Ω, and 150Ω.
- OSC LEVEL**: A switch with positions for 0, -10, -20, -30, -40, -50, -60, -70, -80, -90, and -100.
- OSC FREQ**: A switch with positions for 100Hz, 400Hz, 800Hz, 1600Hz, 3200Hz, 6400Hz, 12800Hz, and 25600Hz.
- LEVEL VAR**: A knob.
- LEVEL**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.
- NOISE**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.
- RETURN LOSS**: A switch with positions for 0dB, 10dB, 20dB, 30dB, 40dB, 50dB, 60dB, 70dB, 80dB, 90dB, and 100dB.
- FREQUENCY**: A large rectangular display area.
- THL CORRECT 4W**: A thumbwheel control.
- CIRCUIT TYPE**: A switch with positions for 4W, 2W, 1W, 0.5W, 0.2W, 0.1W, 0.05W, 0.02W, 0.01W, 0.005W, 0.002W, and 0.001W.
- TEST**: A switch with positions for ERL, SRL, HI, LO, OSC, and EXT.
- 4WTLP**: A switch with positions for 0/0, -16/+7, and 16/-7.
- 2W NET**: A switch with positions for 0/0, 10/0, 20/0, 30/0, 40/0, 50/0, 60/0, 70/0, 80/0, 90/0, and 100/0.
- BP 0.2-5 kHz**: A switch with positions for IN, 0.2, 0.5, 1, 2, 5, 10, 20, 50, 100, and 200.
- L/N RL**: A switch with positions for RL and L/N.
- IMPEDANCE**: A switch with positions for 600Ω, 300Ω, and 150Ω.
- TERM**: A switch with positions for 600Ω, 300Ω, and 150Ω.
- BW**: A switch with positions for 3 kHz, 15 kHz, and 30 kHz.
- LEVEL**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.
- CMSS**: A switch with positions for 3 kHz, 15 kHz, and 30 kHz.
- NOISE**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.
- OUT**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.
- IN**: A switch with positions for 0dBm, 10dBm, 20dBm, 30dBm, 40dBm, 50dBm, 60dBm, 70dBm, 80dBm, 90dBm, and 100dBm.

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to make a local 4-wire transhybrid balance measurement, a 4-wire through measurement, or a terminal balance measurement to a distant office.
2	On Models 100R-4 and 100R-6 only, set the pushbuttons as follows: RCV/SEND/DISP (Model 100R-4 only) to RCV NORM/XFR to NORM OFF/ON/HOLD to OFF CIRCUIT TYPE to 4W 600 ohms TEST to ERL , SRL HI , or SRL LO , depending on type of test being made 4WTLP to 0/0 BP 0.2-5 kHz to IN position L/N RL (Model 100R-4 only) to RL
3	Using a standard Type 310 patchcord, connect to the 4-wire receive and transmit portion of the circuit under test by connecting the TTS SEND jack to the circuit receive side, and the TTS RCV jack to the circuit send side.
4	Place a short or an open on the 2-wire portion of the circuit under test.
5	Adjust the THL CORRECT 4W thumbwheels until the front panel display reads 0 dB . The thumb-wheel settings should be somewhere between 23.0 and 29.9 for the 0 dB display.
6	Remove the short or open from the 2-wire circuit side (made in step 4).
7	Observe the reading on the front panel display. This is the ERL or SRL of the circuit under test, depending on which TEST pushbutton was selected in step 2.
8	When making a 4-wire measurement over a carrier facility (-16/+7 TLP), proceed with steps 9 through 12.
9	Set the 4WTLP 0/0 -16/+7 pushbutton to -16/+7
10	Connect the SEND jack of the TTS to the "MOD IN" of the carrier channel under test (-16 TLP). Connect the RCV jack of the TTS to the "DEMOM OUT" of the circuit under test (+7 TLP).
11	Repeat steps 4 through 7, except the far end places the short or open on the 2-wire end of the circuit under test.
12	Remove all patchcords and restore the circuit to normal.

PROCEDURE 4-8.
2-WIRE ERL AND SRL MEASUREMENTS (MODELS 100R-4, 100R-6 ONLY).

STEP	PROCEDURE
1	This procedure is used to set the TTS controls to make a 2-wire circuit return loss measurement.
2	On the Model 100R-4 or 100R-6, set the pushbuttons as follows: RCV/SEND/DISP (Model 100R-4 only) to RCV NORM/XFR to NORM OFF/ON/DIAL to OFF S/R DIAL to S/R CIRCUIT TYPE to 600 or 900 2W as required for circuit TEST to ERL, SRL HI, or SRL LO, depending on test type being made 4WTLP to 0/0 2W NET to INT, or EXT (optional if using external compromise network (600 or 900 ohms + 2.16 uF connected to rear panel connector TS-1, pins C and D. See CAD drawings in Section 7). BP 0.2-5 kHz to IN L/N RL (Model 100R-4 only) to RL
3	The front panel return loss display should read 0 dB. If not, adjust control LEVEL 1 on the rear panel (see procedure 3-2 in Section 3, page 3-2).
4	Connect the SEND jack of the TTS to the 2-wire transmission point of the circuit to be measured.
5	The return loss display reading is the actual ERL or SRL (as selected in step 2) in dB of the circuit under test.
6	Remove all patchcords and restore the circuit to normal.

PROCEDURE 4-9.
TRANSMISSION TESTING ON 2-WIRE CIRCUITS
(MODELS 100R-4, 100R-5, 100R-6 ONLY).

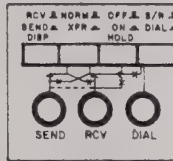

STEP	PROCEDURE
1	This procedure outlines the use of the switches to dial up, talk over, and send/receive on 2-wire facilities.
2	Connect the 2-wire facility to the TTS front panel RCV jack.
3	Set the pushbuttons as follows: RCV/SEND/DISP to RCV ☒ (100R-4 & 100R-5 only) NORM/XFR to NORM ☒ OFF/ON/HOLD to OFF ☒ S/R DIAL to DIAL ☒
4	Patch the test board position circuit or dial set to the DIAL jack for talking and dialing.
5	Establish the 2-wire connection as required.
6	To send or receive tone, set up the TTS oscillator and receive pushbuttons as per procedures 4-1 through 4-3 in this section.
7	To receive a tone on the circuit, set the OFF/ON/HOLD pushbutton to ON and the S/R DIAL pushbutton to S/R ☒ .
8	Observe the TTS level and frequency displays for the received tone.
9	Models 100R-4 & 100R-5 only To send a tone over the same circuit, set the NORM/XFR pushbutton to XFR ☒ .
10	To observe the actual level and frequency of the tone being sent to the far end, set the RCV/SEND/DISP pushbutton to SEND ☒ .

SECTION 5 FUNCTIONAL DESCRIPTION

CONTENTS	PAGE
5. FUNCTIONAL DESCRIPTION	5-1
A. General	5-1
B. Transmitter Circuits for Oscillator and Return Loss	5-1
C. Return Loss Transmitter (Models 100R-4, 100R-6)	5-1
D. Receiver Analog Circuits	5-2
E. Digital Signal Processing Circuits	5-3
F. Switching and Control Logic Circuits	5-3

5.0 CIRCUIT DESCRIPTIONS

A. General

5.01 This section provides a block diagram level description of the circuit operation, which is arranged as follows:

- (a) Transmitter circuits, Level/Noise and Return Loss (reference Figure 5-1).
- (b) Receiver analog circuits, Level/Noise, Frequency, Return Loss (reference Figure 5-2).
- (c) Digital signalling processing circuits (reference Figure 5-3).
- (d) Switching and control logic circuits (reference Figure 5-4).

B. Transmitter Circuits for Oscillator and Return Loss

5.02 The send oscillator signal is generated by U306, the output of which is a near-pure sine wave with a high frequency stability. The frequency output is set by front panel VAR FREQ control R2, or at one of three fixed frequencies by pushbuttons 404, 1004, or 2804 (S22 through S24). U307 provides automatic level control to ensure a uniform output level throughout the operating frequency range of U306.

5.03 U308 provides for setting the oscillator output level through R1, the front panel VAR LEVEL control or OSC LEVEL pushbuttons 0 or -16 (S19 or S20). On the Model 100R-2W, a third pushbutton for -2 dBm is provided.

5.04 When the 1004 OSC FREQ pushbutton is selected, low pass filter U309 is inserted to ensure that second and third order harmonics are

reduced below the 0.5% specification. Output amplifier U310 provides the correct gain and impedance for either the 600 ohm or 900 ohm output selected and fed through L/N RL switch S12 and balanced transformer T300 to the front panel SEND jack, J1. The oscillator tipspring and ring spring contacts are also accessible at rear panel wirewrap connections.

C. Return Loss Transmitter (Models 100R-4 and 100R-6 only)

5.05 The return loss transmitter signal is white noise with a uniform quality and amplitude that is digitally synthesized by U300 and U301. The output is fed to three bandpass filters, for the ERL, SRL LO, and SRL HI test types (U302 through U305). The output of the three filters in turn is fed to analog multiplexer U312. The test type output of U312 is determined by the binary levels on logic control lines S and R as follows:

S	R	TEST TYPE
0	0	ERL
0	1	SRL HI
1	0	SRL LO
1	1	EXT. Osc.

where 0 = approx. 0 to 0.8 VDC 1 = approx. +4 to +5 VDC

5.06 The output of U312 is applied to output amplifier U311 when the front panel 4WTLP switch (S9) is in the 0/0 position. When in the -16/+7 position, the transmit output level is -2 dBm, and a 16 dB pad is inserted to reduce the output of U311 to -18 dBm. This is also referred to as a -16 test level point used for 4-wire return loss measurements on carrier channels. The 0/0 -16/+7 TLP switch is automatically disabled when in the 2-wire mode.

5.07 The output of return loss output amplifier U311 is fed through L/N RL switch S12 (when pressed in) to transformer T300 and on to the SEND Jack, J1. S12 also switches in the precision bridging network required for return loss measurements.

5.08 The outputs of oscillator output amplifier U310 and return loss output amplifier U311 are also applied to multiplexer U313. When the binary control input P to U313 is a 0, the oscillator signal is sent to the receiver circuits to read the level and frequency on the front panel displays if the RCV SEND DISP switch, S13 is pressed). When the control signal at P is a 1, the return loss transmit signal is sent to the level display for viewing.

D. Receiver Analog Circuits

5.09 The receiver analog circuits process the input signals for level, noise, and frequency readings. For Models 100R-4 and 100R-6, they also provide processing for return loss readings.

5.10 Refer to Figure 5-2. The signal to be measured is fed from the input switching circuits (described in the last portion of this section) to balanced input transformer T100 for minimum noise pickup. A blocking capacitor provides input circuit protection up to 300 VDC. The 600 or 900 ohm input is applied to multiplexer U1 along with the CAL SEND input from the transmitter circuits and the noise-to-ground signal. When noise-to-ground is being measured, the signal is passed through a resistive 40 dB attenuator to reduce it to a level suitable for the following circuits. The NOISE N/G pushbutton S10 selects this measurement. U1 selects one of these four signals by binary control signals at points A and B as follows:

A	B	FUNCTION
0	0	CAL SEND
0	1	900 ohm
1	0	600 ohm
1	1	Noise-to-ground

5.11 The output of U1 is fed through buffer U2 to either the 1010 Hz noise notch filter (U6 through U9) or to autoranging amplifier circuit, U3 and U4. If NOTCH pushbutton S9 is selected, transistor switch Q9 feeds the notch filter output signal to the autoranging circuit directly.

Similarly, for any other signal, transistor switch Q8 routes buffer U2 output to autoranging circuit U3 and U4. The autoranging circuit consists of U3 (10

dB gain amplifier), the two dividers and multiplexer U4 that is controlled by the microprocessor in the digital portion through binary control points E, F, G and H. This action provides a 15 dB dynamic range (10 dB plus 5 dB hysteresis). The binary control is as follows:

E	F	G	H	RANGE
0	1	1	1	HIGHEST
0	1	1	0	"
0	1	0	1	"
0	1	0	0	"
0	0	1	1	"
0	0	1	0	"
0	0	0	1	"
0	0	0	0	"
1	0	0	0	LOWEST

5.12 The output of the autoranging circuits is passed through a 19 dB amplifier, U5, which makes up for some of the signal losses in the preceding resistive divider network. For noise measurements, the output of U5 is applied through amplifier U10 to one of three noise weighting filters for C message, 3 kHz flat, or 15 kHz flat to multiplexer U14, depending which front panel push-button is pressed (S6, S7, S8). For level and frequency measurements, the output of U5 is fed directly to U14. For level or return loss measurements, bandpass filter U12 may be switched in (using pushbutton S11) to prevent high or low frequencies outside the band of interest from affecting the readings. Also, for 4-wire return loss measurements at a -16/+7 test level point, a 7 dB pad is inserted in amplifier U13 when push-button S9 is pressed.

5.13 Multiplexer U14 selects either level/frequency, noise, or return loss through binary control signals at points K and L as follows:

K	L	FUNCTION
0	0	Level/frequency
0	1	4-wire return loss
1	0	2-wire return loss
1	1	Noise

5.14 One output from U14 is applied to amplifier U15 and U314 to drive the front panel audio monitor speaker (Model 100R-5 only) and the audio monitor output at the rear panel wirewrap connector (all models). A second output of U14 is fed to sinewave-to-squarewave converter U18, Q13 to provide an input to the digital frequency measuring circuits described later. The third output from U14 is fed to an average detector for level measurements, then applied to log converter U18 and U19. For noise and return loss measurements, the signal is fed to both the average and peak detectors to obtain the correct quasi-rms response. This is controlled by the decoder logic through U20, Q14. Log converters U18 and U19 produce a squarewave output that has a time duration proportional to the logarithmic value of the measured signal. This output is applied to the digital circuits, described next.

E. Digital Signal Processing Circuits

5.15 The output from U18, Q13 is applied to a times 10 frequency counter, U21, U22, U23, and to U24, which contains three separate binary counters. Also fed to U24 is the frequency times 10 output and the output of U42, which senses whether the signal being measured is in range, underrange or overrange. The clock output of timer U31, U40, fed through U42, controls when the 3 counters in U24 are reset in order to provide the correct reading update rate. The output of the U24 counters is applied to a microprocessor (U25, U26, U27). The microprocessor senses the hysteresis points in up and down ranging and provides the appropriate resolution for the frequency measurements for the range in use. In addition, the microprocessor supplies binary control signals to the transmitter and analog circuits, plus the measured signal value in BCD format to display controllers U33, U34. U33 and U34 provide BCD to 7-segment conversion for the digital read-outs. The measured signal value is also supplied in serial format through buffer U41 for a 2-wire output to remote displays.

5.16 Microprocessor U25, U26, U27 provides binary control signals through U32 to control multiplexer U4 in the analog circuits. Also, the microprocessor supplies and receives control information through multiplexer U28, U29, U30. The 4 station-identification control lines provide a test position number on the remote display to show which TTS has been selected by the optional 2-wire combiner (Model 100C-2W). The binary levels of the four lines are set by strapping on rear panel connector, TS1.

5.17 The frequency inhibit input to U28, U29, U30 is a binary 0 for noise measurements to turn off the frequency display. For other measurement functions, the level is a binary 1.

5.18 The three THL control lines provide binary levels as follows for transhybrid loss correction on 4-wire return loss measurements: Maximum setting is 29.9 dB.

LOSS	10dB	1dB	0.1dB
0	0	0	1
1.0	0	1	0
10.0	1	0	0

5.19 The four test-mode control lines, B0 through B3 in Figure 5-4, are applied to U28, U29, U30 to tell the microprocessor which measurement function is selected. The binary level control is as follows:


FUNCTION	B0	B1	B2	B3
Level	0	0	0	0
Noise	0	0	0	1
N/G	0	1	0	1
Ret. Loss	0	0	1	0

F. Switching and Control Logic Circuits

5.20 Refer to Figure 5-4. The SEND and RCV jacks connect to the transmit and receive circuits through front-end switching. Hold circuits can be switched in by pushbutton S15 to provide holding when making measurements on a 2-wire circuit such as a balanced termination number (Code 100).

Dial jack J3 is used to plug in a handset to dial up and hold a circuit. When the test is completed in one direction, switch S14 (NORM XFR) is pressed to reverse the transmit/receive direction without reverse plugging the handset. Impedance selection of 600 or 900 ohms is provided by pushbutton S1.

5.21 The front logic switching consists of flip-flops that receive contact closures from the front panel pushbutton switches in various combinations. The flip-flops provide binary control signals for the transmit, receive and digital circuits in the test set.

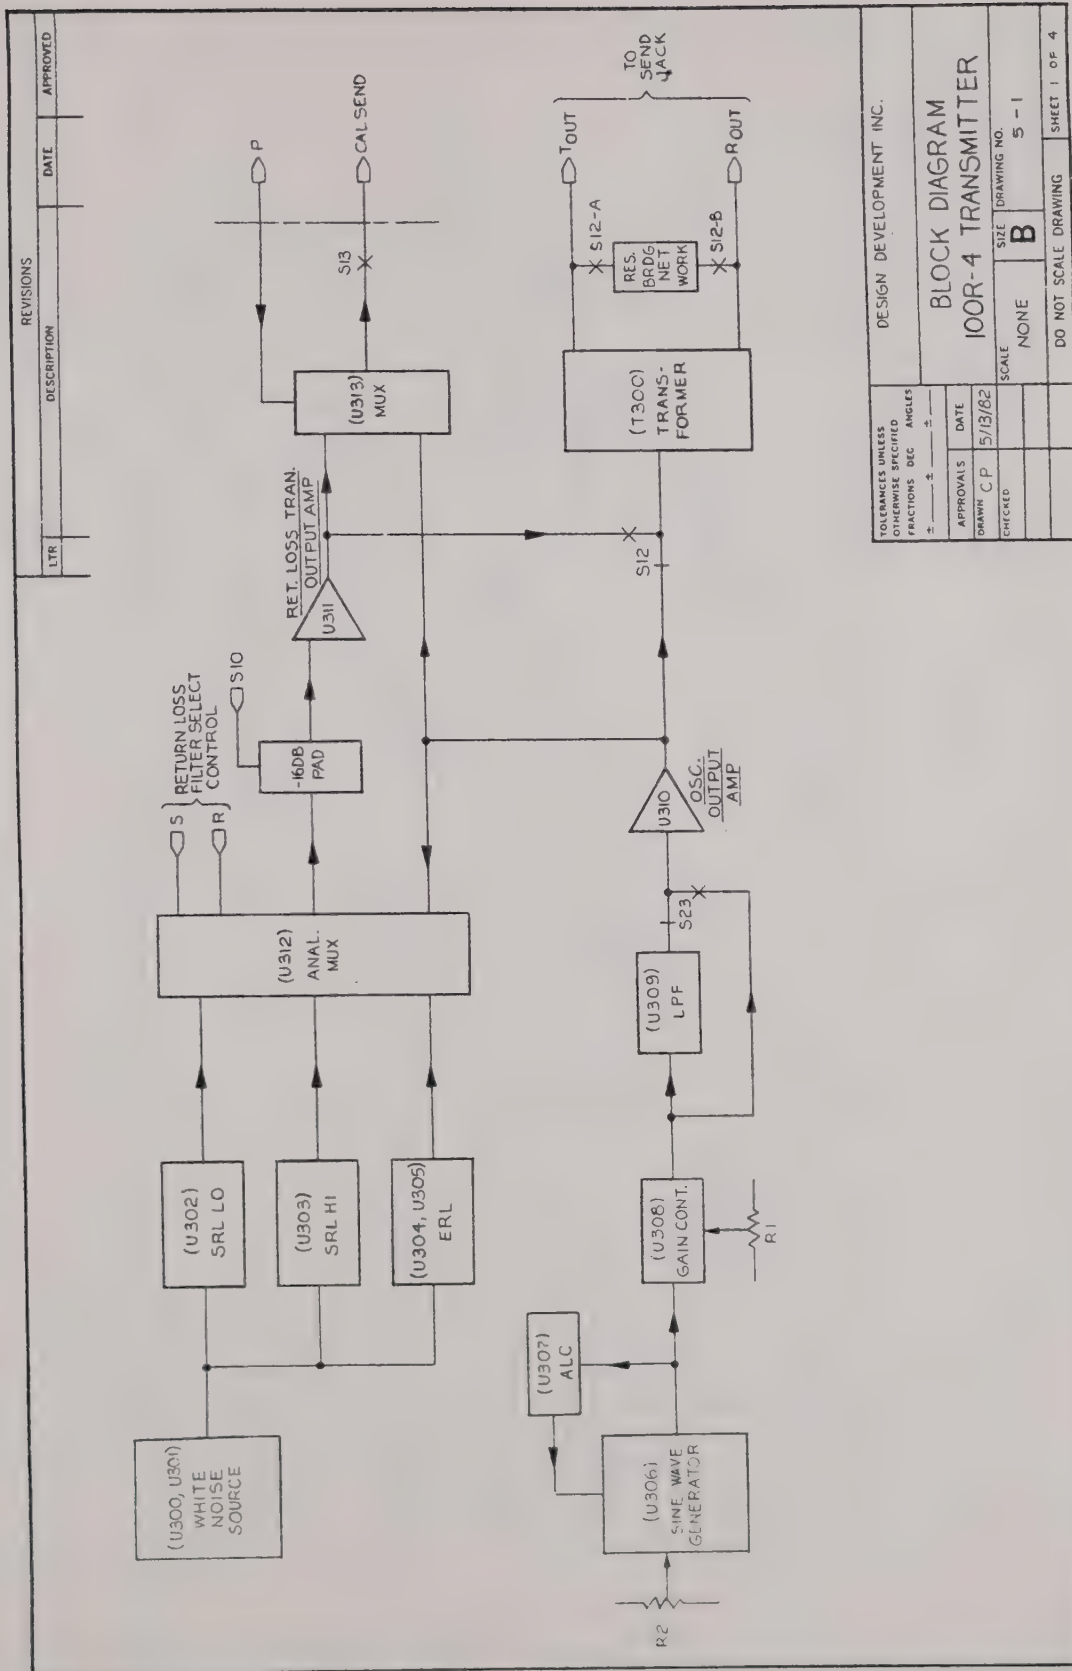

DESIGN DEVELOPMENT INC.

TOLERANCES UNLESS OTHERWISE SPECIFIED
FRACTIONS DEC ANGLES

APPROVALS DATE

DRAWN C P 5/13/82

CHECKED

SCALE NONE


SIZE B

DRAWING NO. S-1

DO NOT SCALE DRAWING

SHEET 1 OF 4

BLOCK DIAGRAM 100R-4 TRANSMITTER

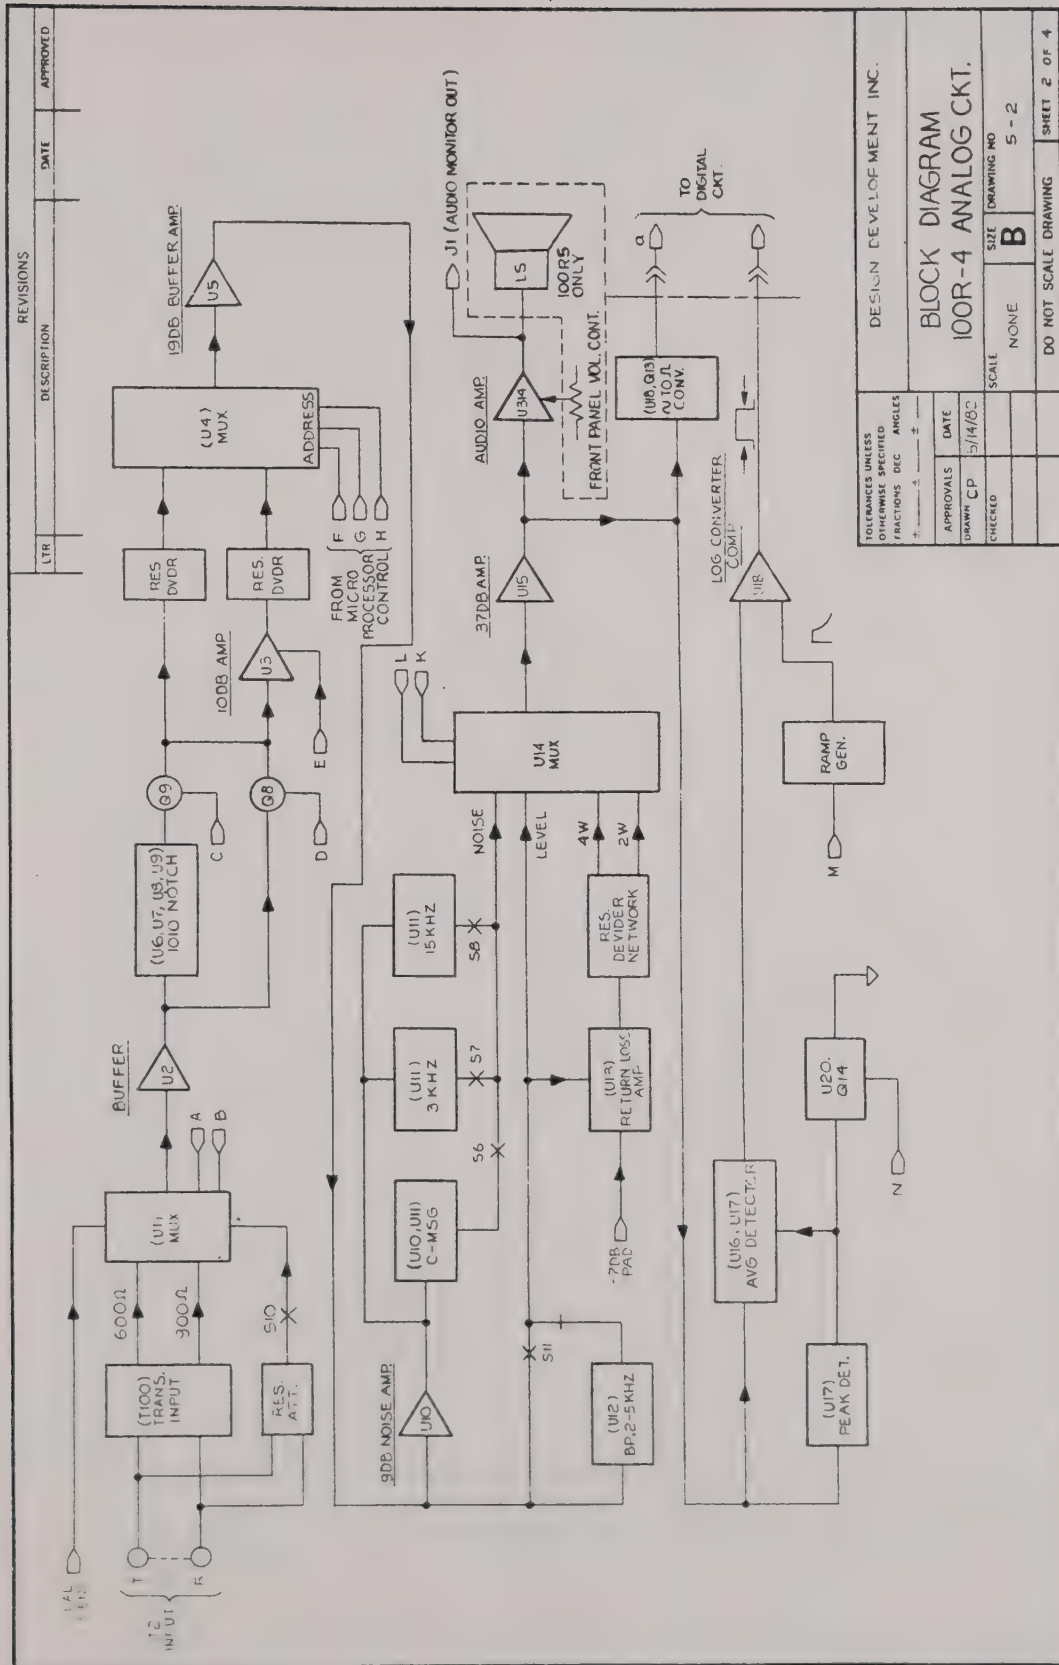



SECTION 6 CALIBRATION PROCEDURES

	CONTENTS	PAGE
6. CALIBRATION PROCEDURES		6-1
A. Introduction		6-1
B. Test Equipment and Skill		
Required		6-1
C. Procedures:		6-2
Level Calibration		6-2
Noise Calibration		6-3

CAUTION

The calibration should only be performed if it is suspected that the equipment is truly out of calibration. See Section 3 for routine performance checks.

6.0 CALIBRATION PROCEDURES

A. Introduction

6.01 The calibration procedures in this section are intended to ensure that the equipment meets the design specifications. These procedures may be performed periodically as per office practice, or when test readings do not agree with those of similar instruments.

B. Test Equipment and Skill Required

6.02 The calibration procedures require precision laboratory test equipment as specified in Table 6-1, or other equivalent. The craftsperson performing these procedures should be experienced in using this test equipment and have knowledge of electronic calibration techniques in general.

TABLE 6-1. TEST EQUIPMENT REQUIRED

TYPE	MODEL/MANUFACTURER	USE
Digital Voltmeter	Hewlett Packard 3490A	Monitor input level to TTS.
Signal Generator	Hewlett Packard 3320B	To supply accurate signal level
Precision resistor	600 ohms, 0.1%	To supply accurate termination
Precision resistor	900 ohms, 0.1%	To supply accurate termination

**PROCEDURE 6-1.
LEVEL CALIBRATION PROCEDURE**

STEP	PROCEDURE
1	Locate the three 10-turn potentiometers on the rear of the TTS marked A, B, and C. These are accessible by removing the cover plate over TS1.
2	Set up the test equipment as shown in Figure 6-1, sketch A. Set the signal generator for a 1 kHz output and set the level so that the voltmeter reads 0.774596 volts.
3	Connect the signal generator to the RCV jack on the TTS as shown in sketch B. CAUTION Be careful not to disturb the signal generator settings established in step 2.
4	On the Model 100R-4 and 100R-5 only, set the front panel pushbuttons as follows: RCV/SEND/DISP to RCV  NORM/XFR to NORM  OFF/ON/HOLD to OFF  S/R DIAL to S/R  L/N RL to L/N  (Model 100R-4 only)
5	Select the IMPEDANCE 600 , INPUT TERM , and dBm LEVEL pushbuttons. Check that the level display reads 0.0 dBm. If not, adjust potentiometer A.
6	Set up the equipment as per sketch C. Set the signal generator for 1 kHz output and adjust the level so that the voltmeter reads 0.948683 volts.
7	Connect the signal generator to the TTS as per sketch D. Be careful not to disturb the signal generator settings.
8	Select the IMPEDANCE 900 ohm pushbutton. Check that the level display reads 0.0. If not, adjust potentiometer C.
9	This completes calibration of the 600 and 900 ohm receiver input circuits.

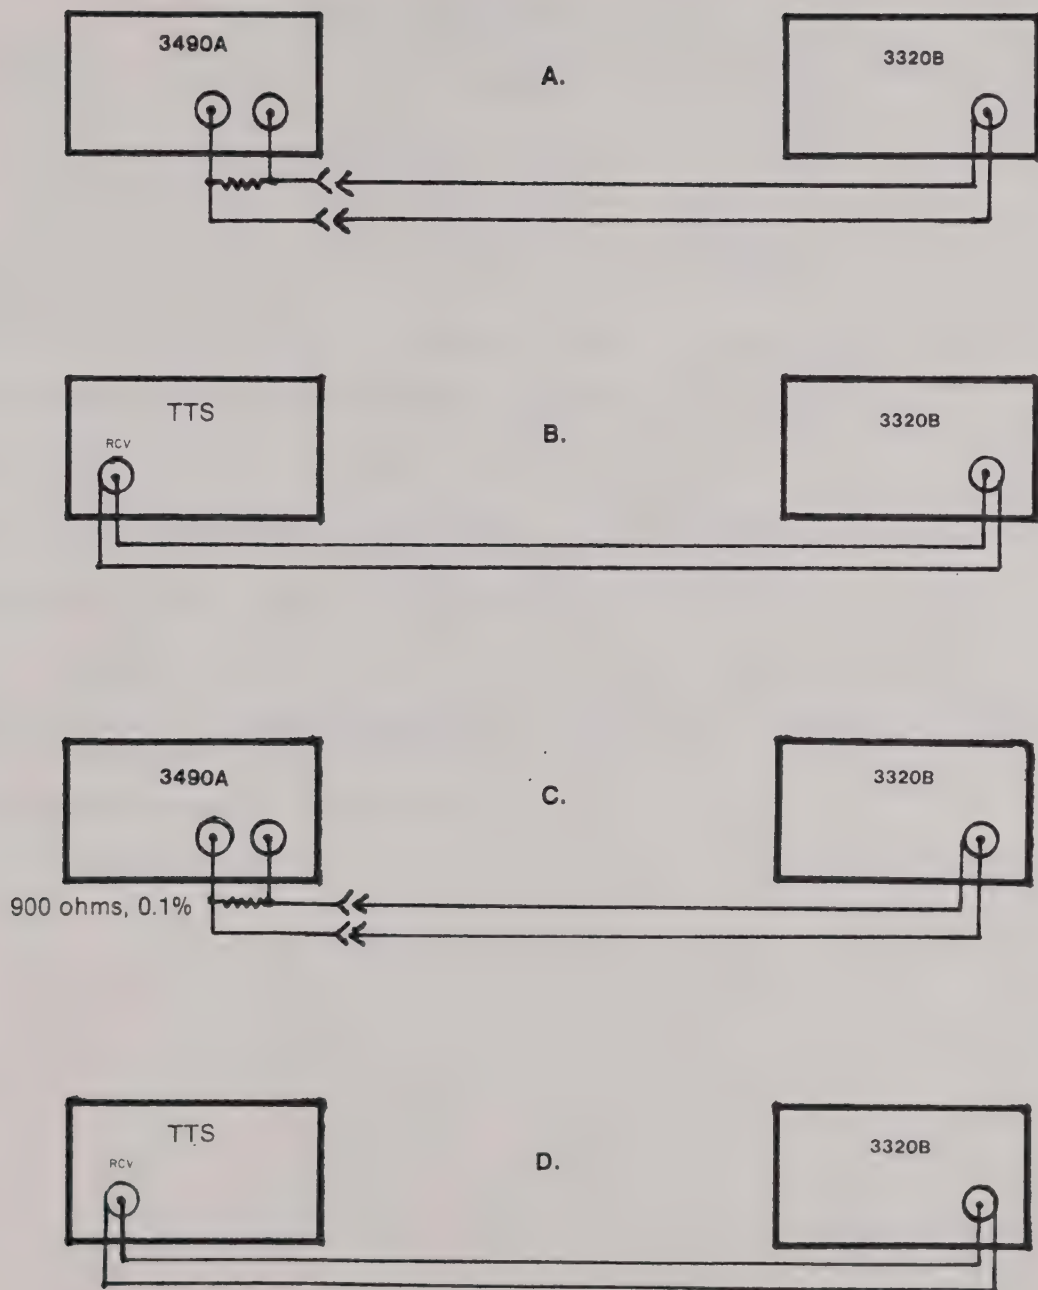


FIGURE 6-1. CALIBRATION TEST SETUP DIAGRAMS

**PROCEDURE 6-2.
NOISE CALIBRATION PROCEDURE.**

STEP	PROCEDURE
	NOTE The level calibration procedure must be performed before starting this procedure.
1	Patch from the SEND jack to the RCV jack using a standard Type 310 patch cord. Set the pushbuttons as follows: OSC LEVEL to VAR OSC FREQ to 1004 NOTCH button OUT
2	Select the IMPEDANCE 600, INPUT TERM and LEVEL dBm pushbuttons.
3	Set the VAR LEVEL control for a reading of -39.6 dB on the level display.
4	Press the NOISE WEIGHTING 3 kHz pushbutton. Check that the display reads +50 dBrn. If not, adjust potentiometer B until the display just changes from +51 to +50 dBrn.
5	Press the LEVEL dBm pushbutton. Set the VAR LEVEL control for a reading of -40.0 dBm.
6	Press the NOISE WEIGHTING 3 kHz pushbutton. Check that the display reads +50 dBrn.
7	Check that the 900 ohm impedance gives the same results, when the oscillator output and the TTS receiver input pushbuttons are selected for 900 ohms.
8	This completes calibration of the noise receiver.

	CONTENTS	PAGE
7.	DRAWINGS	7-1
	Index	7-2
	Cable Apparatus, Overall System	7-3
	Cable Apparatus:	
	Model 100R-2W	7-4
	Model 100R-4	7-5
	Model 100R-5	7-6
	Model 100R-6	7-7
	Cabling, Model 100A-2W to Model	
	100R-5 or 100R-2W	7-8
	Cabling, Model 100A-3 to Model	
	100R-4, 100R-5, 100R-6	7-9


Power Cabling	7-10
Outline Drawings:	
Model 100R-2W	7-11
Model 100R-4	7-12
Model 100R-5	7-13
Model 100R-6	7-14
Model 100A-2W	7-15
Model 100A-3	7-16
Model 100AB-1	7-17
Model 100AB-3	7-18

SHEET INDEX


CONTENTS	SHEET NO.	ISSUE NO.								
		1	2	3	4	5	6	7	8	9
INDEX AND SUPPORTING INFORMATION	1	X								
CABLE APPARATUS DRAWING - OVERALL SYSTEM	2	X								
TRANSMISSION TEST SET MODEL 100R2W CAD 1 FIG. 1	3		X							
ERL AND TRANSMISSION TEST MODEL 100R4 CAD 1 FIG. 2	4	X								
TRANSMISSION TEST SET MODEL 100R5 CAD 1 FIG. 3	5	X								
ERL MEASURING SET MODEL 100R6 CAD 1 FIG. 4	6	X								
CABLING 100A2W TO 100R2W/100R5 CAD 3 FIG. 5	7	X								
CABLING 100A3 TO 100R4/100R5/100R6 CAD 3 FIG. 6	8	X								
POWER WIRING CAD 4 FIG. 7	9	X								
MODEL 100R2W OUTLINE DRAWING	10		X							
MODEL 100R4 OUTLINE DRAWING	11	X								
MODEL 100R5 OUTLINE DRAWING	12	X								
MODEL 100R6 OUTLINE DRAWING	13	X								
MODEL 100A2W OUTLINE DRAWING	14		X							
MODEL 100A3 OUTLINE DRAWING	15	X								
MODEL 100AB 1 OUTLINE DRAWING	15A	X								
MODEL 100AB 3 OUTLINE DRAWING	15B	X								

		DESIGN DEVELOPMENT INC.	
		INSTALLERS DRAWINGS FOR	
		MODELS 100R2W, 100R4, 100R5	
		100R6, 100A2W AND 100A3	
APPROVAL	DATE	SCALE	SIZE
7WIS	3/25/82	NONE	A
CHECKED			
ISSUE	1	SHEET 1 OF 15	



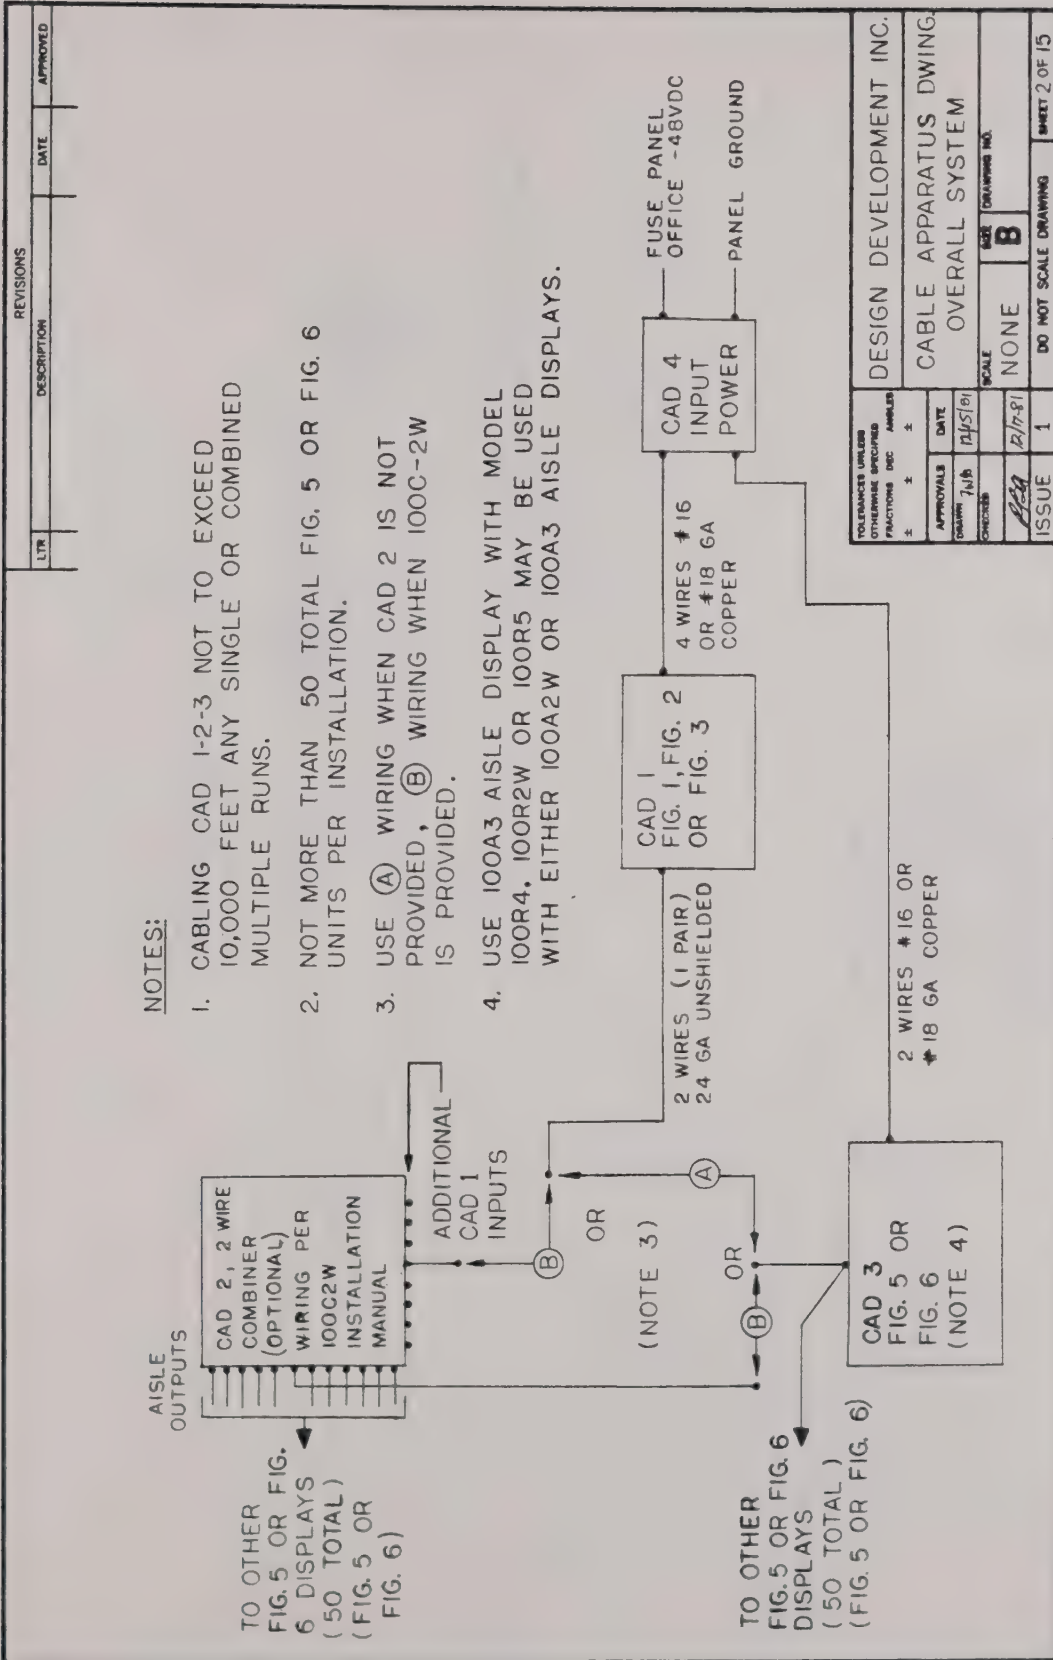

CAD I
FIGURE I



(NOTE 4) POSITION
SERVED OPTIONAL
STRAPPING PER TABLE 1

DESIGN DEVELOPMENT INC.
SUNNYVALE, CALIFORNIA

POWER
ON/OFF

#18 OR #16 AWG
WECO SOLID WIRE.
INPUT POWER PER CAD 4

NOTES:

1. STRAP PINS A-C AND B-D TO MAKE
USE OF FRONT PANEL "CAL" PUSH-
BUTTON (X) WIRING.
2. T1, R1 AND T2, R2 ARE OPTIONAL
CUSTOMER CONNECTION TO THE
TTS. THEY REPRESENT THE TIP
SPRING AND RING SPRING OF THE
FRONT PANEL 310 JACKS INPUT
AND OUTPUT.
3. STRAP E-F TO PROVIDE OSCILLATOR
WITH DC LOOP HOLDING (X) WIRING.
4. STRAPPING PER TABLE 1. USED
WHEN CAD 1 IS FIRST CABLED
THRU CAD 2 (2 WIRE COMBINER)
THEN ON TO CAD 3.


POSITION SERVED
TABLE-1 (NOTE 4)

PIN NUMBER	POSITION INDICATED
4-5	NO POSITION SHOWN
1-2-3-5	1
1-2-4-5	2
1-2-5	3
1-3-4-5	4
1-3-5	5
1-4-5	6
1-5	7
2-3-4-5	8

100R2W CAD 1 FIGURE 1 TRANSMISSION TEST SET REAR VIEW		SCALE NONE		DATE 3/19/83		DRAWN BY C		CHECKED BY C	
100R2W CAD 1 FIGURE 1 TRANSMISSION TEST SET REAR VIEW		SCALE NONE		DATE 3/19/83		DRAWN BY C		CHECKED BY C	

REV	DESCRIPTION	DATE	APPROVED

CAD 1
FIGURE 2

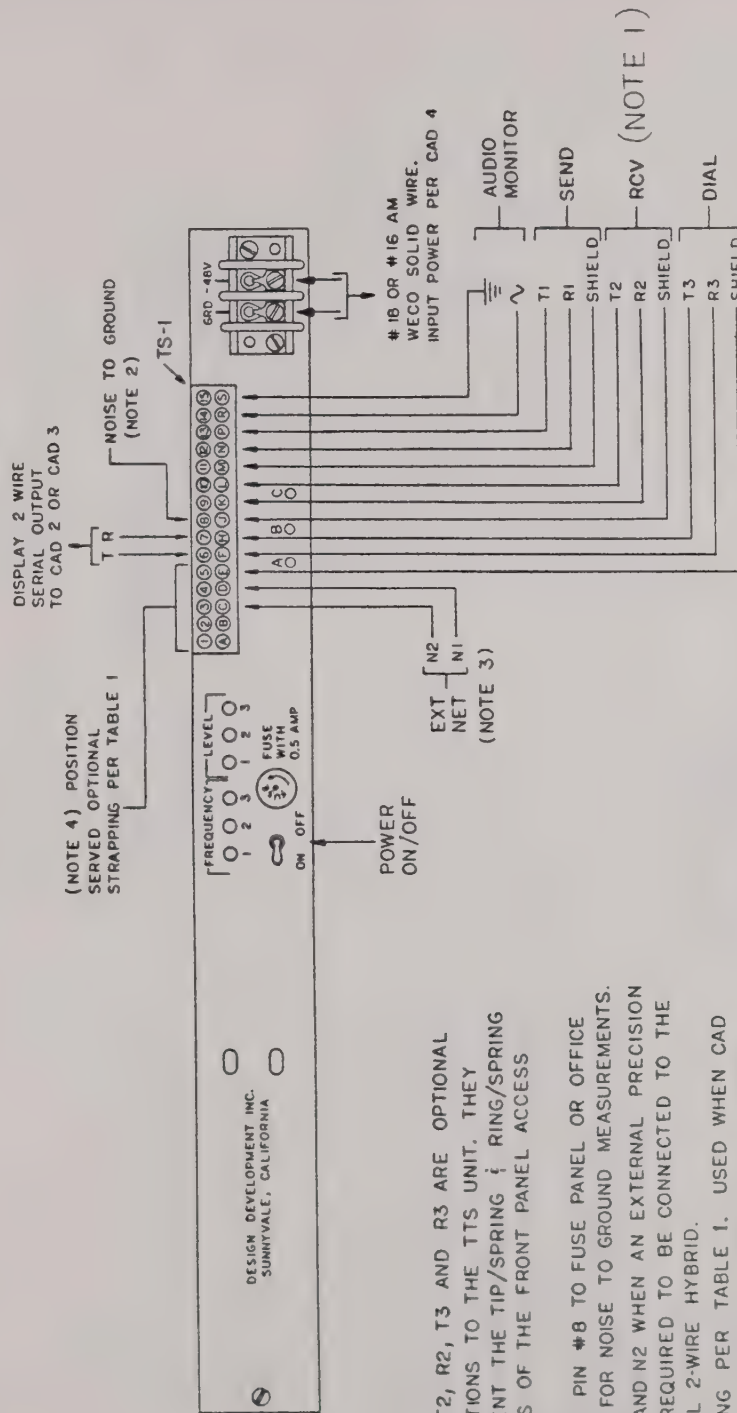


POSITION SERVED
TABLE -1 (NOTE 4)

PIN NUMBER	POSITION INDICATED
NO STRAPS	NO POSITION SHOWN
1-2-3-5	1
1-2-4-5	2
1-2-5	3
1-3-4-5	4
1-3-5	5
1-4-5	6
1-5	7
2-3-4-5	8

NOTES:

1. T1, R1, T2, R2, T3 AND R3 ARE OPTIONAL CONNECTIONS TO THE TTS UNIT. THEY REPRESENT THE TIP/SPRING & RING/SPRING CONTACTS OF THE FRONT PANEL ACCESS JACKS.
2. CONNECT PIN #8 TO FUSE PANEL OR OFFICE GROUND FOR NOISE TO GROUND MEASUREMENTS.
3. USE N1 AND N2 WHEN AN EXTERNAL PRECISION NET IS REQUIRED TO BE CONNECTED TO THE INTERNAL 2-WIRE HYBRID.
4. STRAPPING PER TABLE 1. USED WHEN CAD 1 IS FIRST CABLED THRU CAD 2 (2-WIRE COMBINER) THEN ON TO CAD 3.

DESIGN DEVELOPMENT INC.	
100R-4 CAD 1 FIGURE 2	DATE 4/15
ERL TRANSMISSION UNIT	DO NOT SCALE DRAWING
REAR VIEW	SCALE NONE
ISSUE 1	DATE 4/15

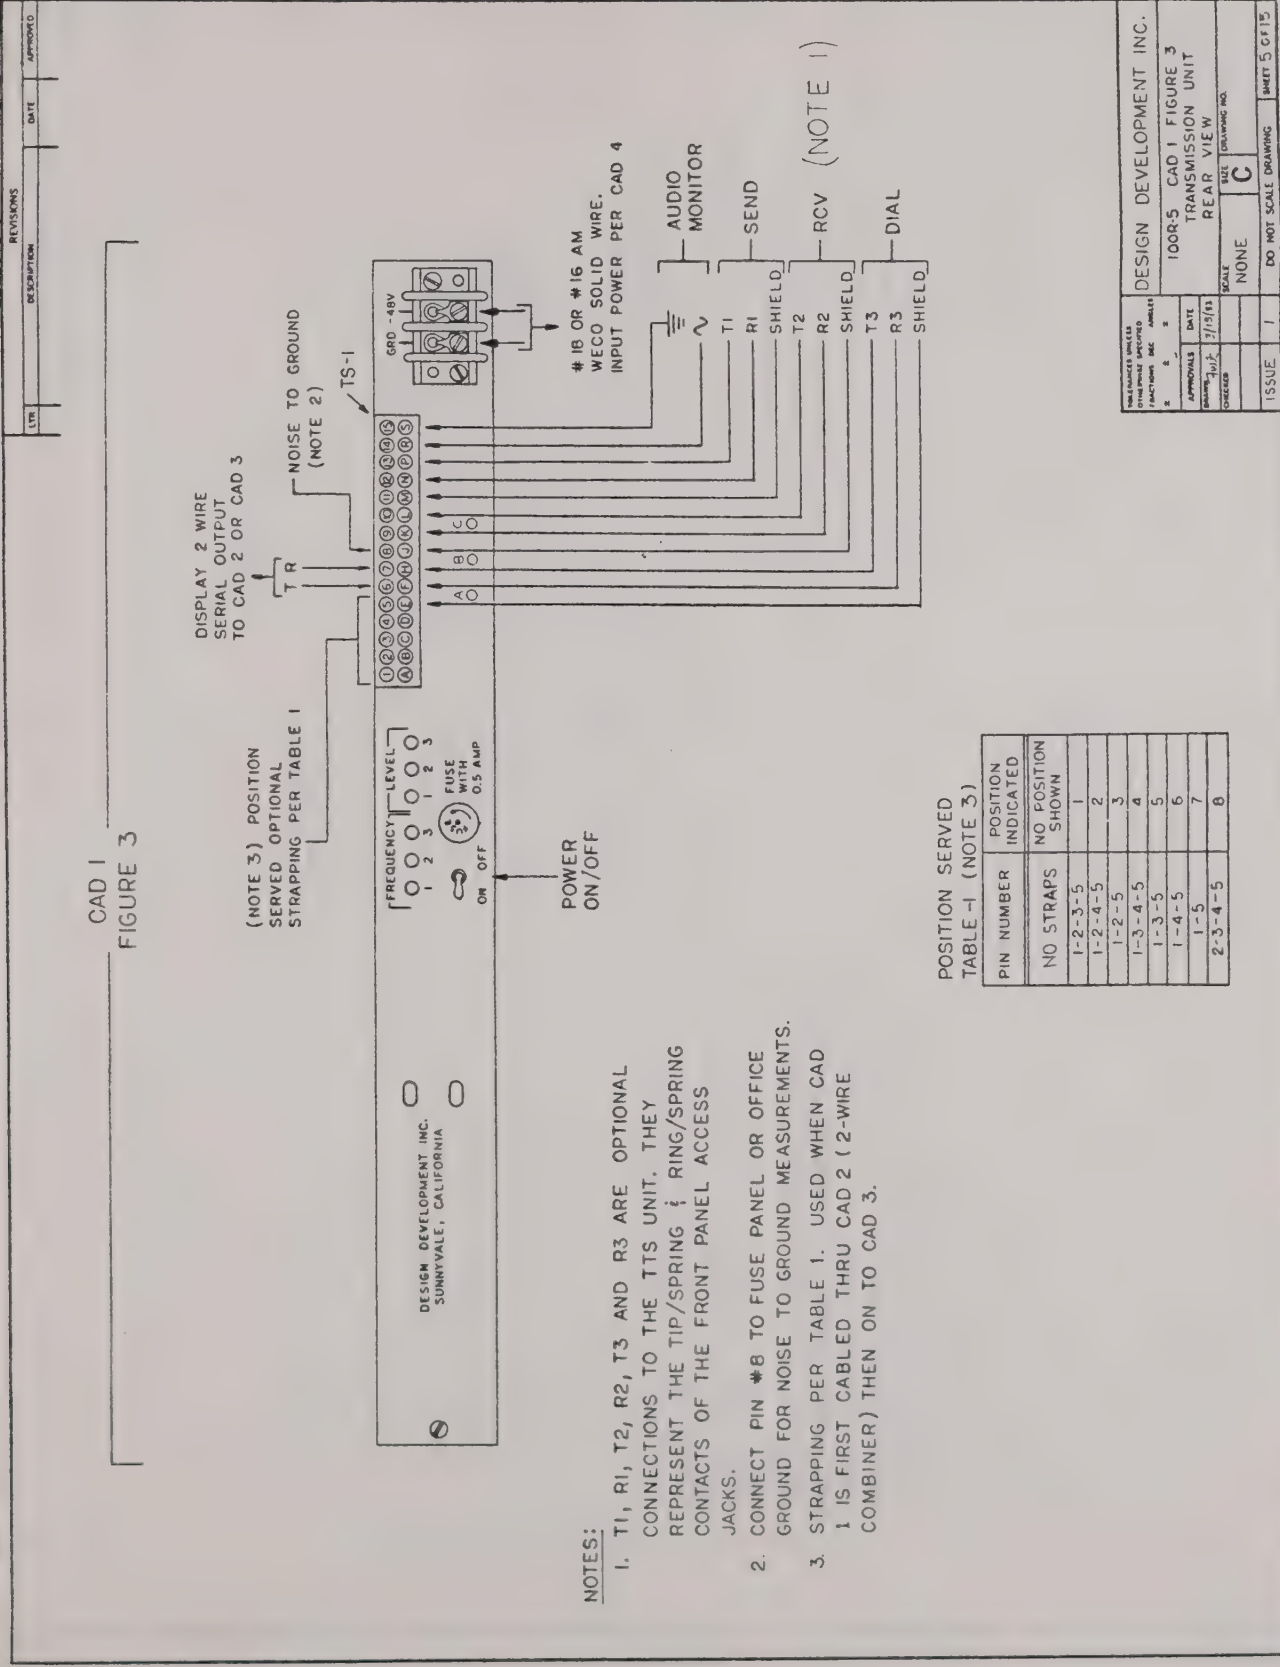



1. T1, R1, T2, R2, T3 AND R3 ARE OPTIONAL CONNECTIONS TO THE TTS UNIT. THEY REPRESENT THE TIP/SPRING & RING/SPRING CONTACTS OF THE FRONT PANEL ACCESS JACKS.
2. USE N1 AND N2 WHEN AN EXTERNAL PRECISION NET IS REQUIRED TO BE CONNECTED TO THE INTERNAL 2-WIRE HYBRID.
3. STRAPPING PER TABLE 1. USED WHEN CAD 1 IS FIRST CABLED THRU CAD 2 (2-WIRE COMBINER) THEN ON TO CAD 3.

POSITION SERVED
TABLE-1 (NOTE 3)

PIN NUMBER	POSITION INDICATED
NO STRAPS	NO POSITION SHOWN
1-2-3-5	1
1-2-4-5	2
1-2-5	3
1-3-4-5	4
1-3-5	5
1-4-5	6
1-5	7
2-3-4-5	8

PROJECT NO. 100-6 DRAWING NO. CAD 1 SHEET NO. FIGURE 4	DESIGN DEVELOPMENT INC.			
APPROVALS DRAWING NO. 100-6 SHEET NO. CAD 1	DATE 7/5/90	SCALE NONE	TITLE REAR VIEW	DO NOT SCALE DRAWING SHEET 6 OF 15

CAD 3
FIGURE 6

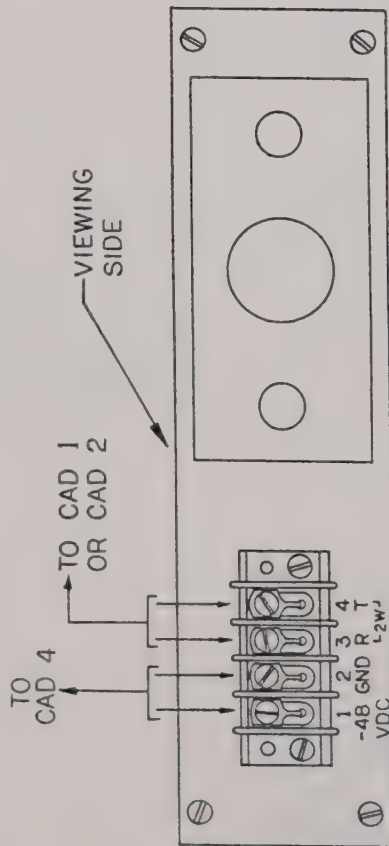


TABLE 2 (NOTE 1) CABLING 100A3 TO 100R4, 100R5 OR 100R6

100A3 TS-1 PIN	100R4, 100R5 OR 100R6 TS-1
3 (RING)	7 (RING)
4 (TIP)	6 (TIP)
1	FUSED -48VDC
2	FUSE PANEL GND.

NOTES:

1. 100A3 IS NORMALLY CABLED TO 100R4, 100R5 OR 100R6 UNLESS OPTIONAL 2-WIRE SWITCH PANEL IS PROVIDED SUCH AS 100C-2W. FOR THIS CABLING REFER TO 100C-2W INSTALLATION MANUAL.
2. CABLING NOT TO EXCEED 10,000 FEET ANY SINGLE OR MULTIPLE RUN COMBINATIONS. UP TO 50 CAD 3 UNITS PER SINGLE INSTALLATIONS.
3. BASIC CABLE REQUIREMENTS ARE 1 PAIR 24 GAUGE UNSHIELDED.

TOLERANCES UNLESS OTHERWISE SPECIFIED		FRACTIONS DEC ANGLES	
±	±	±	±
APPROVALS		DATE	
DRAWN <i>gpl/b</i>		12/16/81	
CHECKED			
<i>gpl</i>		12/17/81	
ISSUE		1	
DESIGN DEVELOPMENT INC.			
CABLING FROM 100A3 TO 100R4, 100R5 OR 100R6			
SCALE		SIZE	
NONE		B	
DRAWING NO.		FIGURE 6	
DO NOT SCALE DRAWING		SHEET 8 OF 15	

FIGURE 7


POWER DRAIN
NOMINAL -48VDC

CAD 1 EA.= 0.3A
CAD 3 EA.= 0.25A


(NOTE 1)

NOTE:


1. WIRE SIZE TO
CADS 1 OR 3
MAY BE #16
OR #18 SOLID
OR STRANDED
COPPER

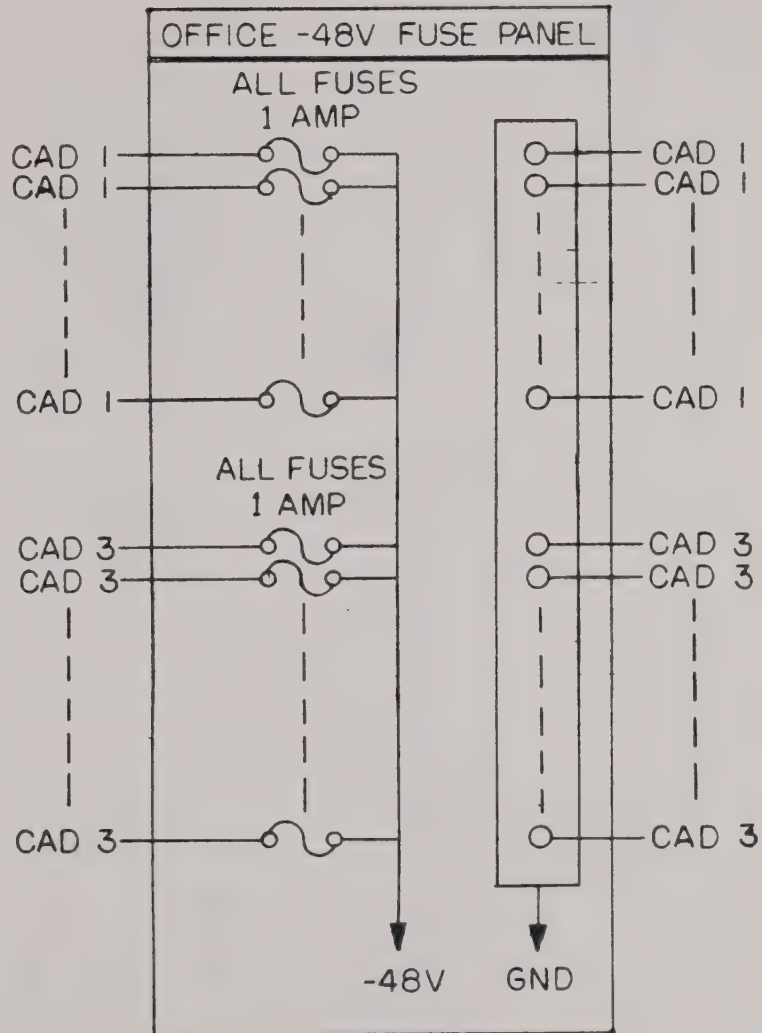

		DESIGN DEVELOPMENT INC.		
		POWER CABLING		
APPROVAL	DATE			
7W8	12/16/81			
CHECKED	DATE	SCALE		FIGURE 7
RBA	12/17/81	NONE		
ISSUE	1	SHEET 9 OF 15		



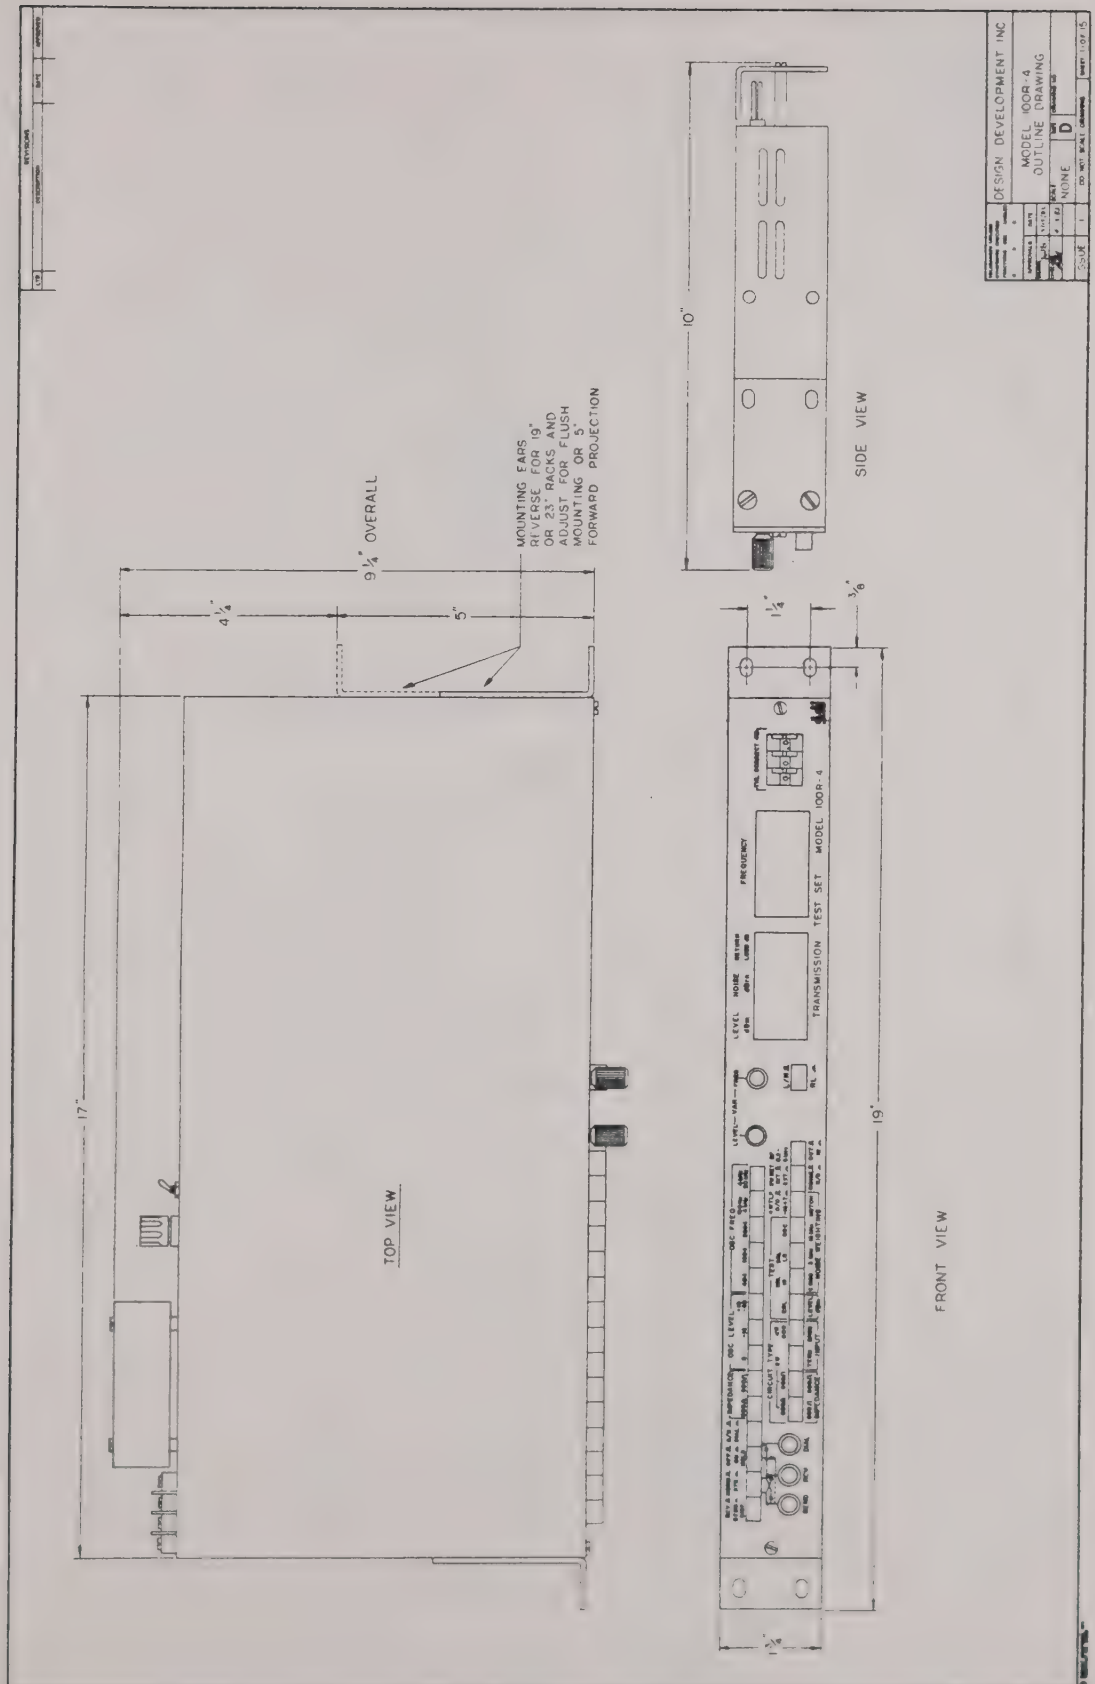


DESIGN DEVELOPMENT INC.	MODEL 100R-4
OUTLINE DRAWING	DATE 10/1/55
BY J. J. JONES	CHK D
NO. 1	REV. 1
NO. 2	REV. 2
NO. 3	REV. 3
NO. 4	REV. 4
NO. 5	REV. 5
NO. 6	REV. 6
NO. 7	REV. 7
NO. 8	REV. 8
NO. 9	REV. 9
NO. 10	REV. 10
NO. 11	REV. 11
NO. 12	REV. 12
NO. 13	REV. 13
NO. 14	REV. 14
NO. 15	REV. 15
NO. 16	REV. 16
NO. 17	REV. 17
NO. 18	REV. 18
NO. 19	REV. 19
NO. 20	REV. 20
NO. 21	REV. 21
NO. 22	REV. 22
NO. 23	REV. 23
NO. 24	REV. 24
NO. 25	REV. 25
NO. 26	REV. 26
NO. 27	REV. 27
NO. 28	REV. 28
NO. 29	REV. 29
NO. 30	REV. 30
NO. 31	REV. 31
NO. 32	REV. 32
NO. 33	REV. 33
NO. 34	REV. 34
NO. 35	REV. 35
NO. 36	REV. 36
NO. 37	REV. 37
NO. 38	REV. 38
NO. 39	REV. 39
NO. 40	REV. 40
NO. 41	REV. 41
NO. 42	REV. 42
NO. 43	REV. 43
NO. 44	REV. 44
NO. 45	REV. 45
NO. 46	REV. 46
NO. 47	REV. 47
NO. 48	REV. 48
NO. 49	REV. 49
NO. 50	REV. 50
NO. 51	REV. 51
NO. 52	REV. 52
NO. 53	REV. 53
NO. 54	REV. 54
NO. 55	REV. 55
NO. 56	REV. 56
NO. 57	REV. 57
NO. 58	REV. 58
NO. 59	REV. 59
NO. 60	REV. 60
NO. 61	REV. 61
NO. 62	REV. 62
NO. 63	REV. 63
NO. 64	REV. 64
NO. 65	REV. 65
NO. 66	REV. 66
NO. 67	REV. 67
NO. 68	REV. 68
NO. 69	REV. 69
NO. 70	REV. 70
NO. 71	REV. 71
NO. 72	REV. 72
NO. 73	REV. 73
NO. 74	REV. 74
NO. 75	REV. 75
NO. 76	REV. 76
NO. 77	REV. 77
NO. 78	REV. 78
NO. 79	REV. 79
NO. 80	REV. 80
NO. 81	REV. 81
NO. 82	REV. 82
NO. 83	REV. 83
NO. 84	REV. 84
NO. 85	REV. 85
NO. 86	REV. 86
NO. 87	REV. 87
NO. 88	REV. 88
NO. 89	REV. 89
NO. 90	REV. 90
NO. 91	REV. 91
NO. 92	REV. 92
NO. 93	REV. 93
NO. 94	REV. 94
NO. 95	REV. 95
NO. 96	REV. 96
NO. 97	REV. 97
NO. 98	REV. 98
NO. 99	REV. 99
NO. 100	REV. 100

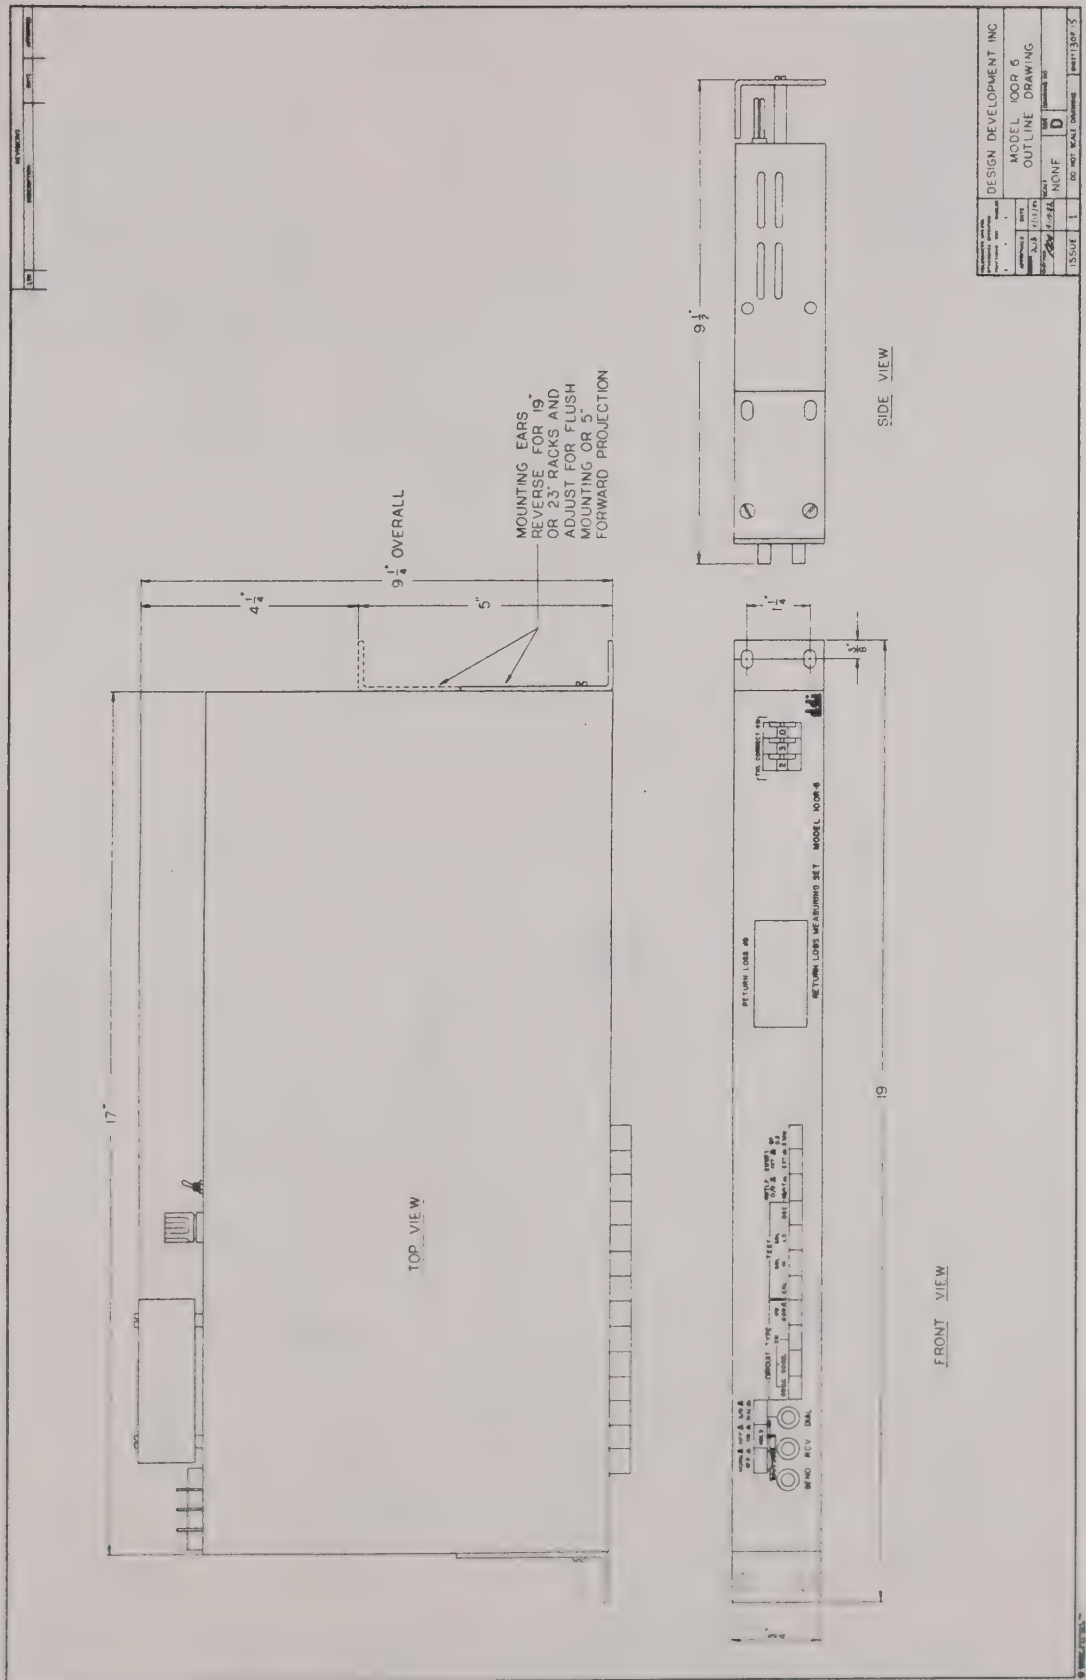


NOTES

1. THREADED ROD CUSTOMER FURNISHED.
2. UNIT SHOWN WITH TOP MOUNTED HANGER ASSEMBLY. CAN BE MOUNTED TOP WALL MOUNT, OR FROM EITHER SIDE.
3. UP TO 50 AISLE DISPLAY 2 WIRE UNITS MAY BE CABLED PER CAD 1 OR CAD 3. CABLING OF ANY ONE RUN OR MULTIPLE RUNS MUST NOT EXCEED 10000 FEET (APPROX 2 MILES).
4. BASIC CABLE REQUIREMENTS TO CAD 1 OR CAD 2 FROM CAD 3 ARE 24 GA UNSHIELDED TWISTED PAIR.

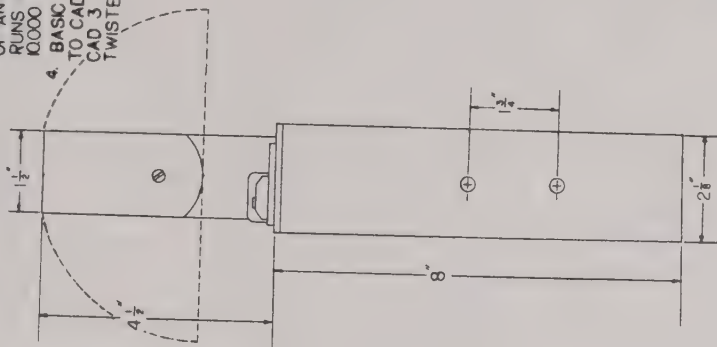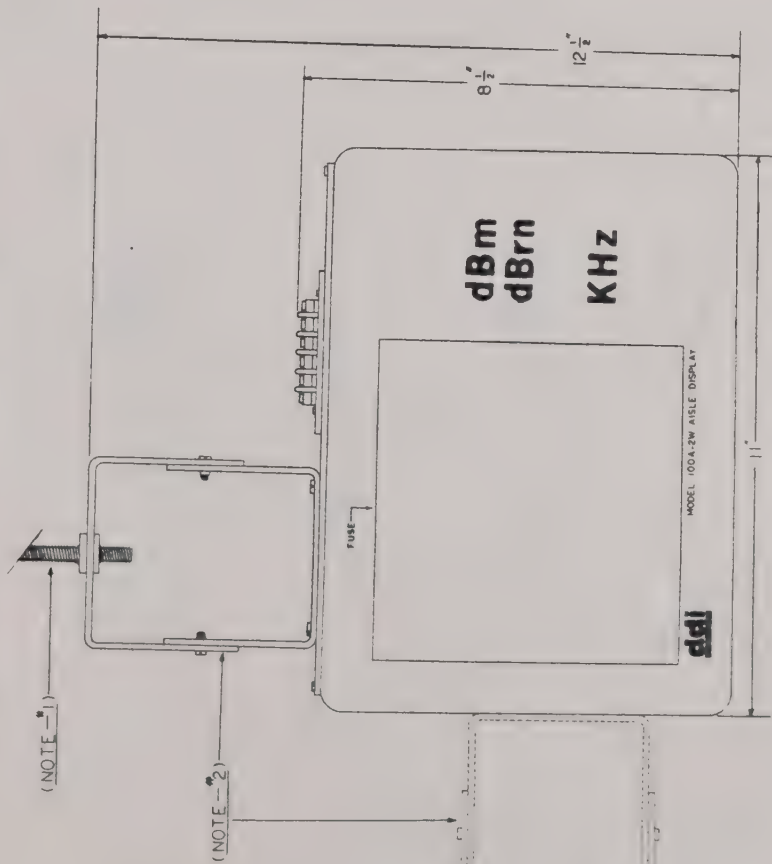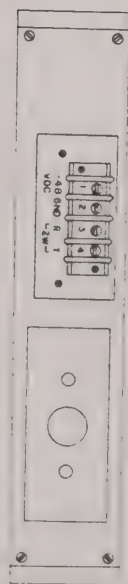

DESIGN DEVELOPMENT INC.	DATE	REV	BY	CHK	APP	DATE
MODEL 100A-2W						
OUTLINE DRAWING						
NO. 1	1	1	1	1	1	1
NONE	D	ISSUE 3				
DO NOT SCALE DRAWING						
SHEET 18 OF 18						

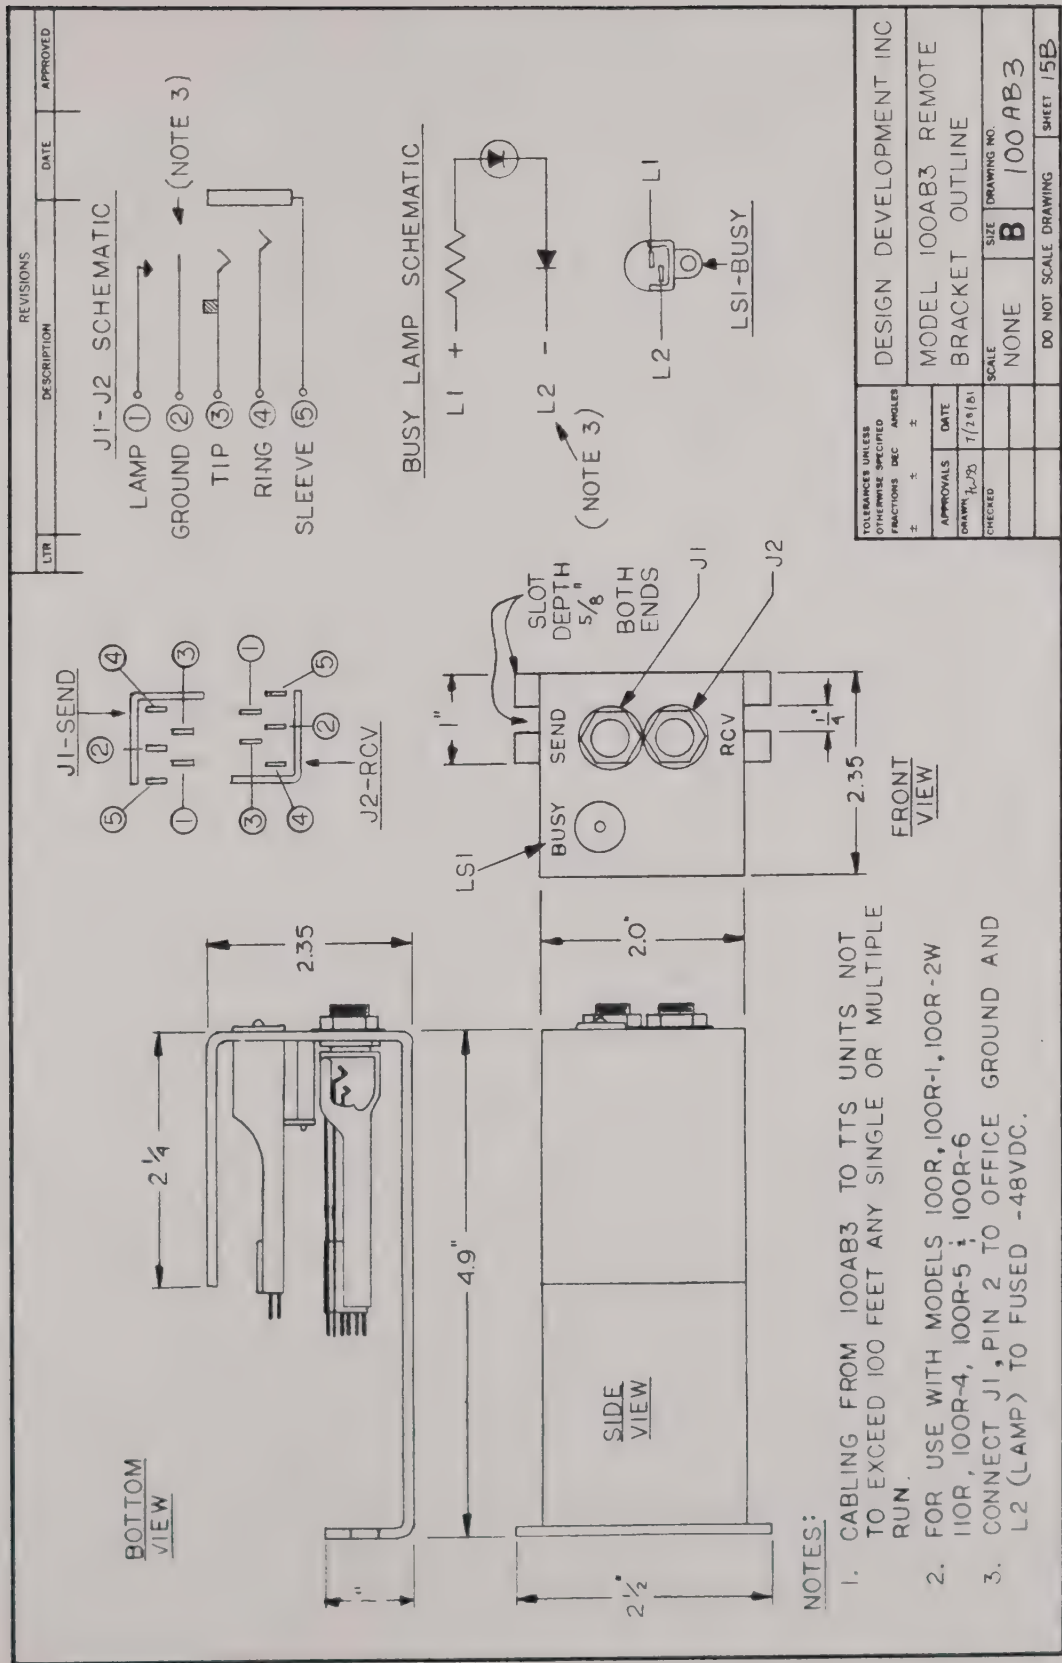

DESIGN DEVELOPMENT INC.
1440 Atteberry Lane
San Jose, CA 95131

MP MASTER



MA32702